

Aircraft Flight Manual

Doc. No. 2008/100

Ed. 2 – Rev. 2

2018, August 02th

Updated AFM incorporating Supplements for G-JACM
Based on Dec No 2008/100 Ed 2 - Rev 1 2018, March 12th
FOR REFERENCE ONLY - ORIG AFM IS DEFINITIVE



TECNAM P2008 JC

MANUFACTURER: *C. A. TECNAM S.r.l.*

AIRCRAFT MODEL: *P2008 JC*

EASA TYPE CERTIFICATE NR.: *A .583 (DATED 2013, 27 SEPTEMBER)*

SERIAL NUMBER: **1112**

BUILD YEAR: **2018**

REGISTRATION MARKINGS: **G-JACN**

Updated AFM incorporating Supplements
Based on Dec No 2008/100
Ed 2 - Rev 1 2018, March 12th
FOR REFERENCE ONLY
ORIGINAL AFM IS DEFINITIVE

This Aircraft Flight Manual is approved and applies only to EASA CS-VLA certified airplanes.

This Manual must be carried in the airplane at all times.

This aeroplane has to be operated in compliance with procedures and limitations contained herein.

Costruzioni Aeronautiche **TECNAM** srl
Via Maiorise
CAPUA (CE) – Italy
Tel. +39-0823 997538
WEB: www.tecnam.com

SECTION 0

INDEX

1.	RECORD OF REVISIONS	3
2.	LIST OF EFFECTIVE PAGES	7
3.	FOREWORD	9
4.	SECTIONS LIST	10

1. RECORD OF REVISIONS

Any revision to the present Manual, except actual weighing data, is recorded: a Record of Revisions is provided in this Section and the operator is advised to make sure that the record is kept up-to-date.

The Manual issue is identified by Edition and Revision codes reported on each page, lower right side.

The revision code is numerical and consists of the number “0”; subsequent revisions are identified by the change of the code from “0” to “1” for the first revision to the basic publication, “2” for the second one, etc.

Should be necessary to completely reissue a publication for contents and format changes, the Edition code will change to the next number (“2” for the second edition, “3” for the third edition etc).

Additions, deletions and revisions to existing text will be identified by a revision bar (black line) in the left-hand margin of the page, adjacent to the change.

When technical changes cause expansion or deletion of text which results in unchanged text appearing on a different page, a revision bar will be placed in the right-hand margin adjacent to the page number of all affected pages providing no other revision bar appears on the page.

These pages will be updated to the current regular revision date.

NOTE

It is the responsibility of the owner to maintain this handbook in a current status when it is being used for operational purposes.

Rev No	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	all	Editorial revision.	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/097.180126)
1	0-1,4,7	Cover, RoR and LOEP updated.	A. Sabino	C. Caruso	M. Oliva	.Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/103.180312)
	2-6	Airspeed indicator markings amended; the indication is now proper for both analogue and digital instruments.				
	3-20	Note amended.				
	4-3, 4-4	Note amended; information have been added to airspeed for normal operations table; paragraph shifted from page 3 to page 4.				
	4-9, 4-12 thru 17	Checklists amended; note to PFI revised; speed information have been moved to page 4-3.				
	6-9	W&B calculation sample.				
	6-11 thru 13	Equipment list.				
	7-1,5 thru 16	Contents rearranged.				
	9-3	Supplements list updated.				
2	0-1,4,7	Cover, RoR and LOEP updated.	G.Valentino	D.Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/111.180802)
	4-12	Added check of pitot heating system (if installed)				
	6-11 thru 13	Equipment list.				
	9-3	Supplements list updated: added Supplement S14				

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

2. LIST OF EFFECTIVE PAGES

The List of Effective Pages (LOEP), applicable to manuals of every operator, lists all the basic AFM pages: each manual could contain either basic pages or one variant of these pages when the pages of some Supplements are embodied.

Pages affected by the current revision are indicated by an asterisk (*) following the revision code.

Edition 1, Rev 0	30 July 2013
Edition 1, Rev 1	25 March 2015
Edition 1, Rev 2	7 April 2015
Edition 1, Rev 3	13 April 2015
Edition 1, Rev 4	14 July 2015
Edition 1, Rev 5	15 December 2015
Edition 1, Rev 6	20 December 2016
Edition 2, Rev 0	15 January 2018
Edition 2, Rev 1	12 March 2018
Edition 2, Rev 2	02 August 2018

Section	Pages	Revision
Section 0	2, 3, 5, 6, 8,9, 10	Rev 0
	1, 4, 7	Rev 2
Section 1	1 thru 14	Rev 0
Section 2	1 thru 5, 7thru 30	Rev 0
	6	Rev 1
Section 3	1 thru 19, 21, 22	Rev 0
	20	Rev 1
Section 4	1, 2, 5 thru 11, 13, 14, 18	Rev 0
	3, 4, 15 thru 17	Rev 1
	12	Rev 2
Section 5	1 thru 16	Rev 0
Section 6	1 thru 8, 10, 14	Rev 0
	9	Rev 1
	11 thru 13	Rev 2
Section 7	2 thru 4	Rev 0
	1, 5 thru 16	Rev 1
Section 8	1 thru 10	Rev 0
Section 9	1, 2 and 4	Rev 0
	3	Rev 2

INTENTIONALLY LEFT BLANK

3. FOREWORD

Tecnam *P2008 JC* is a single-engine two-seat aircraft with a strut braced high wing and fixed landing gear.

Section 1 provides general information and it contains definitions, symbols explanations, acronyms and terminology used.


Before using the airplane, you are recommended to read carefully this manual: a deep knowledge of airplane features and limitations will allow you for operating the airplane safely.

For further information, please contact:

*COSTRUZIONI AERONAUTICHE **TECNAM**s.r.l.*

Via MAIORISE

CAPUA (CE) - ITALY

 +39 (0)823 997538

 airworthiness@tecnam.com

4. SECTIONS LIST

General (*)	Section 1
Limitations (**)	Section 2
Emergency Procedures (**)	Section 3
Normal Procedures (**)	Section 4
Performance (***)	Section 5
Weight and balance (*)	Section 6
Airframe and Systems description (*)	Section 7
Ground Handling and Service (*)	Section 8
AFM Supplements list (*)	Section 9

(*) non-approved Section

(**) approved Section

(***) approved Section except for pages 5-1 thru 5-4, 5-6, 5-11 thru 5-13

SECTION 1 - GENERAL**INDEX**

1. INTRODUCTION	3
2. CERTIFICATION BASIS	3
3. WARNINGS – CAUTIONS – NOTES	3
4. THREE-VIEW AND DIMENSIONS	4
5. ENGINE	6
6. PROPELLER.....	6
7. FLIGHT CONTROL SURFACES TRAVEL.....	7
8. SPECIFIC LOADINGS.....	7
9. ACRONYMS AND TERMINOLOGY	8
10. UNIT CONVERSION CHART	13
11. LITRES / US GALLONS CONVERSION CHART	14

INTENTIONALLY LEFT BLANK

1. INTRODUCTION

The Flight Manual has been prepared to provide pilots and instructors with information for the safe and efficient operation of this very light airplane.

This manual includes the material required to be furnished to the pilot of CS-VLA. It also contains supplemental data supplied by the airplane manufacturer.

2. CERTIFICATION BASIS

This type of aircraft has been approved by the European Aviation Safety Agency in accordance with CS-VLA including Amendment 1 and the Type Certificate No.EASA.A.583 has been issued on (date) 27th September 2013.

Category of Airworthiness: Normal

Noise Certification Basis: EASA CS 36 Amendment 2.

3. WARNINGS – CAUTIONS – NOTES

Following definitions apply to warnings, cautions and notes used in the Aircraft Flight Manual.



WARNING

means that the non-observation of the corresponding procedure leads to an immediate or important degradation of the flight safety.



CAUTION

means that the non-observation of the corresponding procedure leads to a minor or to a more or less long term degradation of the flight safety.

NOTE

draws the attention to any special item not directly related to safety but which is important or unusual.

4. THREE-VIEW AND DIMENSIONS

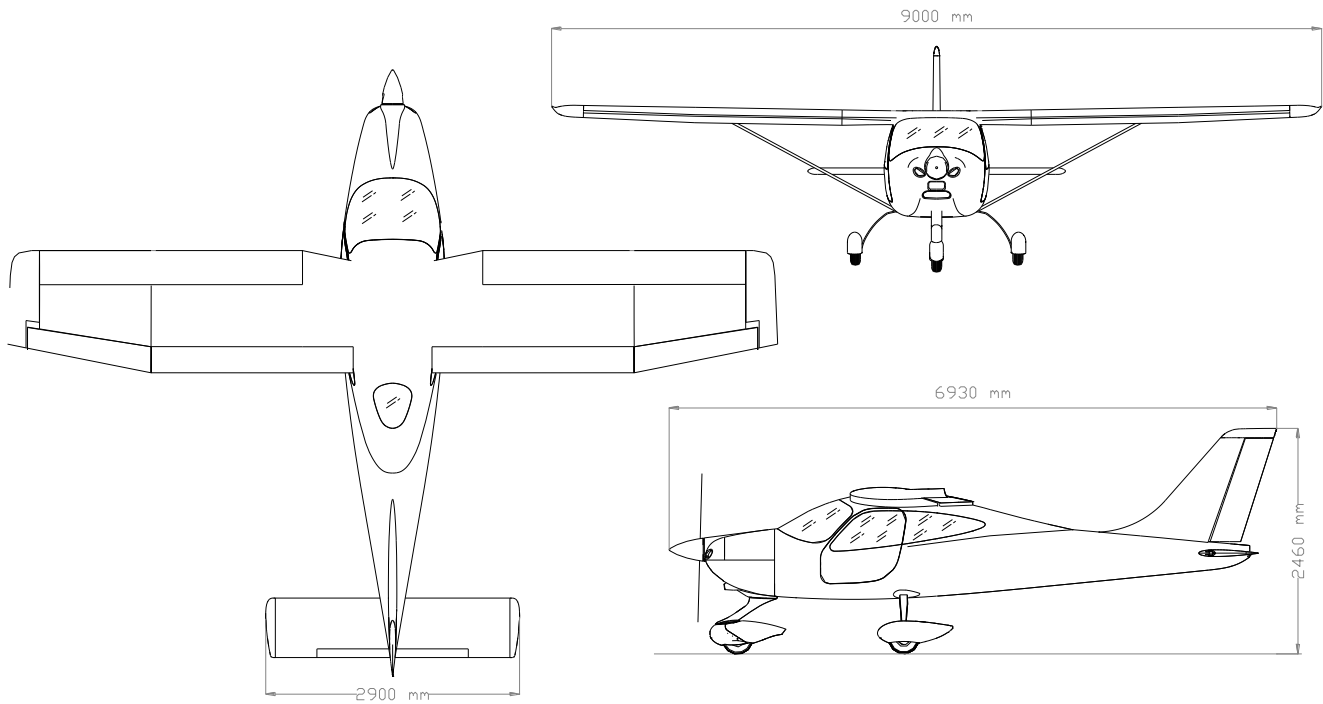


Figure 1 – General views

Dimensions***Wing***

Wing Span	9.00 m (29.5 ft)
Wing Area	12.16 m ² (130.9 ft ²)
Aspect Ratio	6.7
Taper Ratio	0.8
Wing chord	1.373 m (4.5 ft)

Fuselage

Overall length	6.93 m (22.9 ft)
Overall width	1.20 m (3.9 ft)
Overall height	2.67 m (8.8 ft)

Empennage

Stabilator span	2.90 m (9.51 ft)
Stabilator area	2.03 m ² (21.8 ft ²)
Vertical tail area	1.06 m ² (11.4 ft ²)

Landing Gear

Wheel track	1.8 m (5.9 ft)
Wheel base	1.94 m (6.4 ft)
Main gear tire	5.00-5
Nose Gear tire	5.00-5

5 ENGINE

Manufacturer	Bombardier-Rotax GmbH
Model	912 S2
Engine type	4 cylinders horizontally opposed with 1352 c.c. of overall displacement, liquid cooled cylinder heads, ram-air cooled cylinders, two carburetors, integrated reduction gear box with torsional shock absorber and overload clutch.
Maximum power (at declared rpm)	73.5 kW (98.6 hp) @ 5800 rpm <i>5 minutes maximum.</i> 69.0 kW (92.5 hp) @ 5500 rpm <i>maximum continuous.</i>

6 PROPELLER

Manufacturer	MT Propeller
Model	MTV-34-1-A/170-202
Number of blades	3
Construction	Laminated hard wood with epoxy fibre glass cover
Diameter	1700 mm
Type	Fixed pitch

7. FLIGHT CONTROL SURFACES TRAVEL

Ailerons	Up 22° Down 14° (± 2°)
Stabilator (refer to Trailing Edge)	Up 4° Down 15° (± 2°)
Stabilator trim tab (refer to Trailing Edge)	Up 2°; Down 12° (± 1°)
Rudder	RH 25° LH 25° (± 2°)
Flaps	0°; 35° (± 1°)

8. SPECIFIC LOADINGS

	MTOW 650 kg (1433lb)
Wing Loading	53.5 kg/m ² (10.9 lb/sqft)
Power Loading	6.59 kg/hp (14.53 lb/hp)

9. ACRONYMS AND TERMINOLOGY

KCAS	<u>Calibrated Airspeed</u> is the indicated airspeed expressed in knots, corrected taking into account the errors related to the instrument itself and its installation.
KIAS	<u>Indicated Airspeed</u> is the speed shown on the airspeed indicator and it is expressed in knots.
KTAS	<u>True Airspeed</u> is the KCAS airspeed corrected taking into account altitude and temperature.
V _A	<u>Design Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement.
V _{FE}	<u>Maximum Flap Extended speed</u> is the highest speed permissible with flaps extended.
V _{NO}	<u>Maximum Structural Cruising Speed</u> is the speed that should not be exceeded, except in smooth air and only with caution.
V _{NE}	<u>Never Exceed Speed</u> is the speed limit that may not be exceeded at any time.
V _O	<u>Operating Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement
V _S	<u>Stall Speed</u> .
V _{S0}	<u>Stall Speed in landing configuration</u> (flaps extended).
V _{S1}	<u>Stall speed in the given flap configuration</u> .
V _X	<u>Best Angle-of-Climb Speed</u> is the speed which allows best ramp climb performances.
V _Y	<u>Best Rate-of-Climb Speed</u> is the speed which allows the best gain in altitude over a given time.
V _R	<u>Rotation speed</u> : is the speed at which the aircraft rotates about the pitch axis during takeoff

Meteorological terminology

ISA	<u>International Standard Atmosphere</u> : is the air atmospheric standard condition at sea level, at 15°C (59°F) and at 1013.25hPa (29.92inHg).
QFE	<u>Official atmospheric pressure at airport level</u> : it indicates the aircraft absolute altitude with respect to the official airport level.
QNH	<u>Theoretical atmospheric pressure at sea level</u> : is the atmospheric pressure reported at the medium sea level, through the standard air pressure-altitude relationship, starting from the airport QFE.
OAT	<u>Outside Air Temperature</u> is the air static temperature expressed in degrees Celsius (°C).
T _S	<u>Standard Temperature</u> is 15°C at sea level pressure altitude and decreased by 2°C for each 1000 ft of altitude.
HP	<u>Pressure Altitude</u> is the altitude read from an altimeter when the barometric subscale has been set to 1013 mb.

Aircraft performance and flight planning terminology

<i>Crosswind Velocity</i>	is the velocity of the crosswind component for the which adequate control of the airplane during takeoff and landing is assured.
<i>Usable fuel</i>	is the fuel available for flight planning.
<i>Unusable fuel</i>	is the quantity of fuel that cannot be safely used in flight.
<i>G</i>	is the acceleration of gravity.
<i>TOR</i>	is the takeoff distance measured from actual start to wheel liftoff point.
<i>TOD</i>	is total takeoff distance measured from start to 15m obstacle clearing.
<i>GR</i>	is the distance measured during landing from actual touchdown to stop point.
<i>LD</i>	is the distance measured during landing, from 15m obstacle clearing to actual stop.
<i>S/R</i>	is the specific range, that is the distance (in nautical miles) which can be expected at a specific power setting and/or flight configuration per kilogram of fuel used.

Weight and balance terminology

<i>Datum</i>	“Reference datum” is an imaginary vertical plane from which all horizontal distances are measured for balance purposes.
<i>Arm</i>	is the horizontal distance of an item measured from the reference datum.
<i>Moment</i>	is the product of the weight of an item multiplied by its arm.
<i>C.G.</i>	<u>Center of Gravity</u> is the point at which the airplane, or equipment, would balance if suspended. Its distance from the reference datum is found by dividing the total moment by the total weight of the aircraft.
<i>Standard Empty Weight</i>	is the weight of the aircraft with engine fluids and oil at operating levels.
<i>Basic Empty Weight</i>	is the standard empty weight to which it is added the optional equipment weight.
<i>Useful Load</i>	is the difference between maximum takeoff weight and the basic empty weight.
<i>Maximum Takeoff Weight</i>	is the maximum weight approved to perform the takeoff.

INTENTIONALLY LEFT BLANK

10. UNIT CONVERSION CHART

<i>MULTIPLYING</i>		<i>BY →</i>	<i>YIELDS</i>	
TEMPERATURE				
Fahrenheit	[°F]	$\frac{5}{9} \cdot (F - 32)$	Celsius	[°C]
Celsius	[°C]	$\left(\frac{9}{5} \cdot C\right) + 32$	Fahrenheit	[°F]
FORCES				
Kilograms	[kg]	2.205	Pounds	[lbs]
Pounds	[lbs]	0.4536	Kilograms	[kg]
SPEED				
Meters per second	[m/s]	196.86	Feet per minute	[ft/min]
Feet per minute	[ft/min]	0.00508	Meters per second	[m/s]
Knots	[kts]	1.853	Kilometres / hour	[km/h]
Kilometres / hour	[km/h]	0.5396	Knots	[kts]
PRESSURE				
Atmosphere	[atm]	14.7	Pounds / sq. in	[psi]
Pounds / sq. in	[psi]	0.068	Atmosphere	[atm]
LENGTH				
Kilometres	[km]	0.5396	Nautical miles	[nm]
Nautical miles	[nm]	1.853	Kilometres	[km]
Meters	[m]	3.281	Feet	[ft]
Feet	[ft]	0.3048	Meters	[m]
Centimetres	[cm]	0.3937	Inches	[in]
Inches	[in]	2.540	Centimetres	[cm]
VOLUME				
Litres	[l]	0.2642	U.S. Gallons	[US Gal]
U.S. Gallons	[US Gal]	3.785	Litres	[l]
AREA				
Square meters	[m ²]	10.76	Square feet	[sq ft]
Square feet	[sq ft]	0.0929	Square meters	[m ²]

11. LITRES / US GALLONS CONVERSION CHART

Litres	US Gallons
5	1.3
10	2.6
15	4.0
20	5.3
25	6.6
30	7.9
35	9.2
40	10.6
45	11.9
50	13.2
60	15.9
70	18.5
80	21.1
90	23.8
100	26.4
110	29.1
120	31.7
130	34.3
140	37.7
150	39.6
160	42.3
170	44.9
180	47.6
190	50.2
200	52.8

US Gallons	Litres
1	3.8
2	7.6
3	11.4
4	15.1
6	22.7
8	30.3
10	37.9
12	45.4
14	53.0
16	60.6
18	68.1
20	75.7
22	83.3
24	90.9
26	98.4
28	106.0
30	113.6
32	121.1
34	128.7
36	136.3
38	143.8
40	151.4
45	170.3
50	189.3
55	208.2

SECTION 2 – LIMITATIONS**INDEX**

1. INTRODUCTION	3
2. AIRSPEED LIMITATIONS.....	5
3. AIRSPEED INDICATOR MARKINGS	6
4. POWERPLANT LIMITATIONS	7
5. FUEL.....	8
6. LUBRICANT.....	8
7. COOLANT LIQUID.....	8
8. PAINT	8
9. PROPELLER.....	9
10. MAXIMUM OPERATING ALTITUDE	9
11. AMBIENT TEMPERATURE	9
12. POWERPLANT INSTRUMENTS MARKINGS	10
13. OTHER INSTRUMENTS MARKINGS	10
14. WEIGHTS.....	12
15. CENTER OF GRAVITY RANGE.....	14
16. APPROVED MANOEUVRES.....	16
17. MANOEUVRES LOAD FACTOR LIMITS	17
18. DEMONSTRATED CROSS WIND SAFE OPERATIONS	18
19. FLIGHT CREW	18
20. KINDS OF OPERATION EQUIPMENT LIST (KOEL)	19
21. LIMITATIONS PLACARDS.....	21
22. OTHER PLACARDS	23

INTENTIONALLY LEFT BLANK

1. INTRODUCTION

Section 2 includes operating limitations, instrument markings, and basic placards necessary for safe operation of the aeroplane, its engine, standard systems and standard equipment.

INTENTIONALLY LEFT BLANK

2. AIRSPEED LIMITATIONS

The following table addresses the airspeed limitations and their operational significance:

AIRSPEED		KIAS	KCAS	REMARKS
V _{NE}	Never exceed speed	143	139	Do not exceed this speed in any operation.
V _{NO}	Maximum Structural Cruising speed	111	110	Do not exceed this speed except in smooth air, and only with caution.
V _A	Design Manoeuvring speed	98	97	Do not make full or abrupt control movement above this speed, because under certain conditions the aircraft may be overstressed by full control movement.
V _O	Operating Manoeuvring speed			
V _{FE}	Maximum flaps extended speed	70	71	Do not exceed this speed for indicated flaps setting.

3. AIRSPEED INDICATOR MARKINGS

Airspeed indicator markings and their colour code are explained in the following table.

MARKING	KIAS	EXPLANATION
White arc/band	40 – 70	Positive Flap Operating Range (lower limit is V_{SO} , at specified maximum weight and upper limit is the maximum speed permissible with landing flaps extension).
Green arc/band	49 – 111	Normal Operating Range (lower limit is V_{S1} at specified maximum weight and most forward c.g. with flaps retracted and upper limit is maximum structural speed V_{NO}).
Yellow arc/band	111 – 143	Manoeuvres must be conducted with caution and only in smooth air.
Red line	143	Maximum speed for all operations.

4. POWERPLANT LIMITATIONS

Following table reports the powerplant operating limitations:

ENGINE MANUFACTURER: Bombardier Rotax GmbH.

ENGINE MODEL: 912 S2

MAXIMUM POWER:

	Max Power kW (hp)	Max rpm. Prop. rpm(engine)	Time max. (minutes)
Max. T.O.	73.5 (98.6)	2388 (5800)	5
Max. Cont.	69 (92.5)	2265 (5500)	-

Temperatures:

Max CHT*	135° C
Max CT	120° C
Min/Max Oil	50° C / 130° C

* applicable for Engines up to serial no. 4924543(included) and repaired engine which doesn't change the cylinder head n°3 with new one (part no. 413195)

Oil Pressure:

Minimum	12psi	(below 1440 propeller rpm)
Maximum	102 psi	(above 1440 propeller rpm)



CAUTION

In event of cold starting operation, it is permitted a maximum oil pressure of 7 bar for a short period.

Engine starting: allowable temperature range

OAT Min	-25° C
OAT Max	+50° C

Fuel pressure:

Minimum	2.2 psi
Maximum	7.26 psi

5. FUEL

2 TANKS:	62 litres each one (16.38 US gallons)
MAXIMUM CAPACITY:	124 litres (32.76 US gallons)
MAXIMUM USABLE FUEL:	120 litres (32 US gallons)
APPROVED FUEL:	MOGAS ASTM D4814 (min RON 95/AKI 91)
	MOGAS EN 228 Super/Super plus (min. RON 95/AKI 91)
	AVGAS 100 LL (ASTM D910)



CAUTION

Prolonged use of Aviation Fuel Avgas 100LL results in greater wear of valve seats and greater combustion deposits inside cylinders due to higher lead content. Make reference to Rotax Maintenance Manual which prescribes dedicated checks due to the prolonged use of Avgas.

6. LUBRICANT

Recommended by Rotax:

BRAND	DESCRIPTION	SPECIFICATION	VISCOSITY	CODE
SHELL	AeroShell Sport Plus 4	API SL	SAE 10 W-40	2

NOTE

Use only oil with API classification “SG” or higher. see Rotax SI-912-016 R4 for list of alternative recommended commercial brands and types

7. COOLANT LIQUID

Refer to “Rotax Operators Manual” – last issue -, “Operating Media” Section.

NOTE: For the Engines affected by Rotax SB-912-066 R1, the waterless coolant is not permitted)

8. PAINT

To ensure that the temperature of the composite structure does not exceed limits, the outer surface of the airplane must be painted with white paint, except for areas of registration marks, placards, and ornament. Refer to Aircraft Maintenance Manual (AMM), Chapter 51, for specific paint requirements.

9. PROPELLER

Manufacturer	MT Propeller
Model	MTV-34-1-A/170-202
Number of blades	3
Construction	Laminated hard wood with epoxy fibre glass cover
Diameter	1700 mm
Type	Fixed pitch

10. MAXIMUM OPERATING ALTITUDE

Maximum operating altitude is 13000ft (3962 m) MSL.



CAUTION

Flight crew is required to use supplemental oxygen according to applicable Air Operation Rules.

11. AMBIENT TEMPERATURE

Ambient temperature: from -25°C to +50°C.



WARNING

Flight in expected and/or known icing conditions is forbidden.

12. POWERPLANT INSTRUMENTS MARKINGS

Powerplant instrument markings and their colour code significance are shown below:

INSTRUMENT		RED LINE Minimum limit	GREEN ARC Normal operating	YELLOW ARC Caution	RED LINE Maximum limit
Propeller	rpm	----	577 - 2265	2265 - 2388	2388
Oil temp.	°C	50	50-130	----	130
CHT*	°C	----	0-135	----	135
CT	°C	----	0-120	----	120
Oil pressure	psi	OP LOW WARNING 12 psi	----	-----	102
Fuel press.	psi	FP LOW WARNING 2.2 psi	2.2-7.26	----	7.26

**- applicable for Engines up to serial no. 4924543(included) and repaired engine which doesn't change the cylinder head n°3 with new one (part no. 413195)*

13. OTHER INSTRUMENTS MARKINGS

INSTRUMENT	RED ARC Minimum limit	GREEN ARC Normal operating	YELLOW ARC Caution	RED ARC Maximum limit
Voltmeter	10-10.5 Volt	12-16 Volt	--	16-16,5

INTENTIONALLY LEFT BLANK

14. WEIGHTS

Condition	Weight	
Maximum takeoff weight	650 kg	1433lb
Maximum landing weight	650 kg	1433lb

Baggage Compartment		
Maximum weight	20 kg	44lb
Maximum specific pressure	12,5 kg/dm ²	256 lbs/sq in

INTENTIONALLY LEFT BLANK

15. CENTER OF GRAVITY RANGE

Datum	Vertical plane tangent to the propeller flange (the aircraft must be levelled in the longitudinal plane)
Levelling	Refer to the seat track supporting beams (see procedure in Section 6)
Forward limit	1.841 m (20% MAC) aft of datum for all weights
Aft limit	1.978 m (30% MAC) aft of datum for all weights



The pilot is responsible for ensuring that the airplane is properly loaded. Refer to Section 6 for appropriate instructions.

INTENTIONALLY LEFT BLANK

16. APPROVED MANOEUVRES

The aircraft is certified in Normal Category in accordance with EASA CS-VLA regulation applying to aeroplanes intended for non-aerobatic operation only.

Non aerobatic operation includes:

- Any manoeuvre pertaining to “normal” flight
- Stalls (except whip stalls)
- Lazy eights
- Chandelles
- Steep turns in which the angle of bank is not more than 60°

Recommended entry speeds for each approved manoeuvre are as follows:

Manoeuvre	Speed [KIAS]
Lazy eight	98
Chandelle	111
Steep turn (max 60°)	98
Stall	Slow deceleration (1 kts/s)



Acrobatic manoeuvres, including spins and turns with angle of bank of more than 60°, are not approved for such a category.



Limit load factor could be exceeded by moving abruptly flight controls at their end run at a speed above V_A (Manoeuvring Speed: 98 KIAS).



Flight in expected and/or known icing conditions, in proximity of storms or in severe turbulence is forbidden.

17. MANOEUVRES LOAD FACTOR LIMITS

Manoeuvre load factors limits are as follows:

Positive	Negative
+ 3.8 g	- 1.9 g

Manoeuvre load factors limits with flaps extended are as follows:

Positive	Negative
+ 1.9 g	0 g

18. DEMONSTRATED CROSS WIND SAFE OPERATIONS

The aircraft controllability, during take-offs and landings, has been demonstrated with a cross wind components of *15kts*.

19. FLIGHT CREW

Minimum crew:	1 pilot
Maximum number of occupants:	2 people (including the pilot)

20. KINDS OF OPERATION EQUIPMENT LIST (KOEL)

This paragraph reports the KOEL table, concerning the equipment list required on board under CS-VLA regulations to allow flight operations in VFR Day and VFR Night.

Flight in VFR Day and Night is permitted only if the prescribed equipment is installed and operational.



WARNING

VFR NIGHT operation is limited to airfields providing centre line illumination.

Additional equipment, or a different equipment list, for the intended operation may be required by national operational requirements and also depends on the airspace classification and route to be flown. The owner is responsible for fulfilling these requirements.



WARNING

Primary flight information (airspeed, altitude, heading and attitude) is provided by MD302. All information provided by G3X Touch is only intended for situational awareness.

AFMS S8 - MD302 and G3X Touch

Equipment	VFR Day	VFR Night
MD302 (PFI)	•	•
MAGNETIC DIRECTION INDICATOR	•	•
ANALOGUE FUEL QUANTITY INDICATORS	•	•
ANALOGUE CT (or CHT if applicable) INDICATOR	•	•
ANALOGUE RPM INDICATOR	•	•
ANALOGUE OIL TEMPERATURE INDICATOR	•	•
ANALOGUE VOLTMETER	•	•
GARMIN 3X TOUCH SUITE		
TRANSPONDER	•	•
ALTITUDE ENCODER	•	•
LONGITUDINAL TRIM INDICATOR	•	•
FLAP POSITION INDICATOR	•	•
COMM/NAV EQUIPMENT	•	•
AUDIO PANEL/MARKER BEACON	•	•
LANDING/TAXI LIGHT		•
STROBE LIGHTS		•
NAV LIGHTS		•
ANNUNCIATOR PANEL	•	•
BREAKERS PANEL	•	•
STALL WARNING SYSTEM	•	•
FIRST AID KIT	•	•
HAND-HELD FIRE EXTINGUISHER	•	•
ELT	•	•
PITOT HEAT		•
TORCH (WITH SPARE BATTERIES)		•
PANEL LIGHTS		•
EMERGENCY LIGHT		•
DIMMING DEVICES		•
DAY/NIGHT SWITCH		•

21. LIMITATIONS PLACARDS

The following limitation placards are placed in plain view on the pilot, reminding the observance of aircraft operating limitations according to installed equipment configuration (see KOEL, Para. 20).

Manoeuvring Speed
 $V_A = 98$ kts

This a/c is classified as VLA
approved for
DAY OR NIGHT VFR
(with required equipment)
in non-icing conditions.
all aerobatics manoeuvres
including spinning are prohibited.
For operating limitations
refer to KOEL in the
FLIGHT MANUAL

On the right hand side of the instrument panel the following placard is placed reminding the observance for “no smoking”:

NO SMOKING

In the baggage compartment following placard is placed:

TIE-DOWN HARNESS
MAX WEIGHT 20kg [44 lbs]


DO NOT PLACE SHARP
OBJECTS ON THE FLOOR

Below the G3X Touch LH screen, the following label is placed:


FOR SITUATIONAL AWARENESS ONLY

22. OTHER PLACARDS

Engine compartment placards

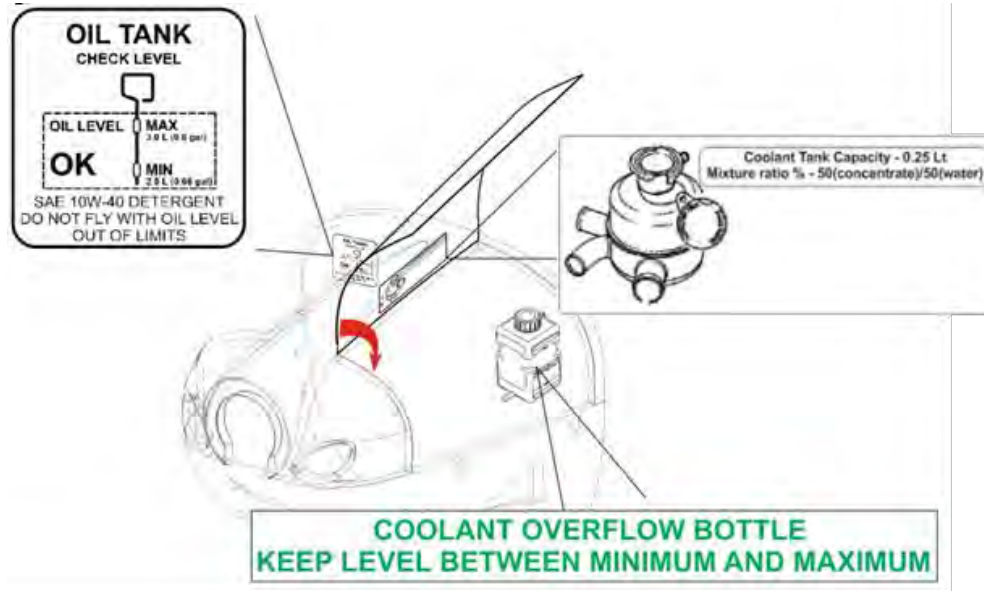


Oil brakes reservoir placard

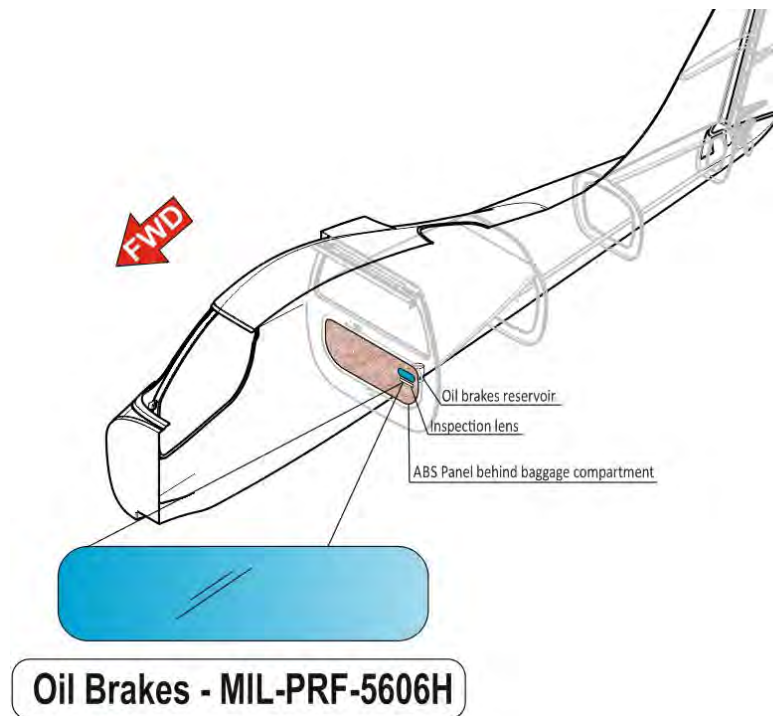

Usable fuel markings



Allowed fuel placard

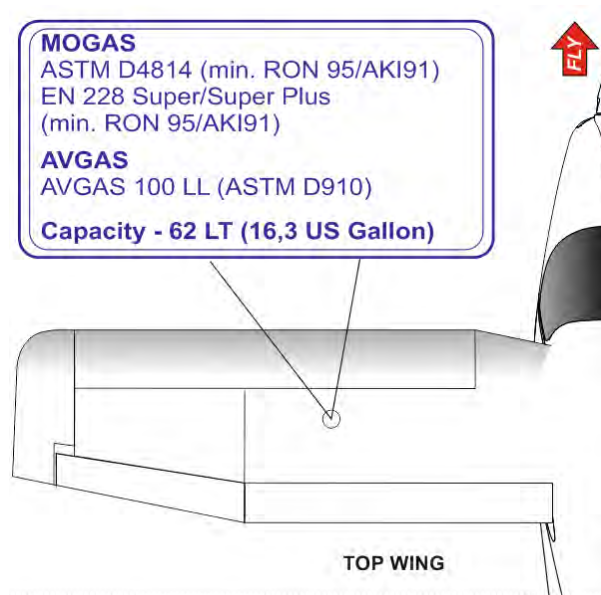

Emergency exit placard

EMERGENCY EXIT

Parking brake placard




Throttle marking



Fuel selector valve marking



Choke placard

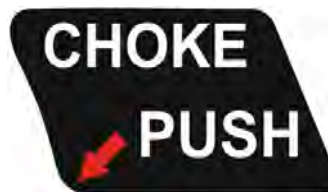

Alternate static port placard



Cabin heat/defrost placard



Carb heat placard



Ignition key placard



Master/Generator placards




Map-light placard



MAP - LIGHT

Flap indicator placard

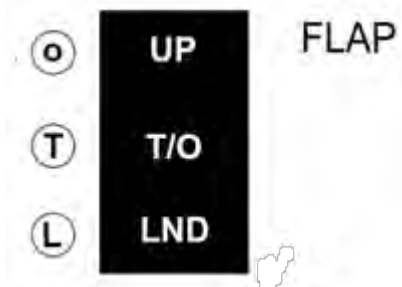

Backrest lever placard



Safety equipment location placard





Elt placard



Battery placard



Upper panel

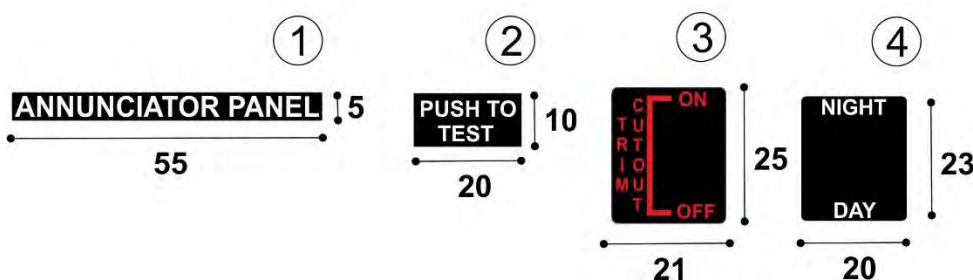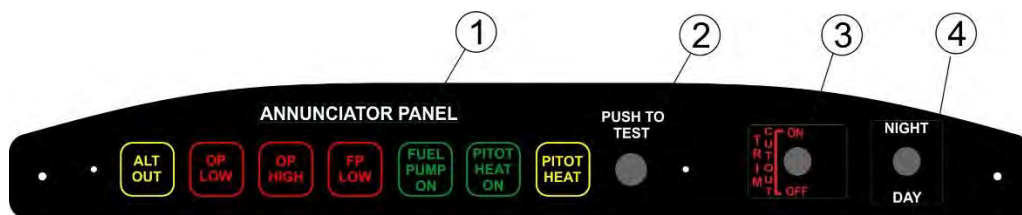

Switches labels



Door lock lever

CLOSED

OPEN

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

SECTION 3 – EMERGENCY PROCEDURES

INDEX

1. INTRODUCTION	3
2. AIRPLANE ALERTS	4
2.1. Electric Power System Malfunction	5
2.2. G3X Failures	6
2.3. Pitot Heating System Failure	7
3. AIRPLANE EVACUATION	8
4. ENGINE SECURING	8
5. ENGINE FAILURE.....	9
5.1. Engine Failure During Take-Off Run.....	9
5.2. Engine Failure Immediately After Take-off	9
5.3. Engine Failures During Flight.....	10
5.3.1 Low Fuel Pressure	10
5.3.2 Low Oil Pressure	11
5.3.3 High Oil Temperature	12
5.3.4 CHT/CT limit exceedance.....	13
6. IN-FLIGHT ENGINE RESTART	14
7. SMOKE AND FIRE	15
7.1. Engine fire on the ground.....	15
7.2. Engine Fire During Takeoff	15
7.3. Engine Fire In-Flight	16
7.4. Cabin Fire / Electrical smoke in cabin during flight	16
7.5. Electrical smoke/fire in cabin on the ground.....	16
8. LANDING EMERGENCIES	17
8.1. Forced Landing Without Engine Power.....	17
8.2. Power-On Forced Landing.....	17
8.3. Landing With A Flat Nose Tire	17
8.4. Landing With A Flat Main Tire.....	18
9. RECOVERY FROM UNINTENTIONAL SPIN	19
10. OTHER EMERGENCIES	20
10.1. Unintentional Flight Into Icing Conditions	20
10.2. Trim System Failure	21
10.3. Flaps Failure	21
10.4. Static ports failure.....	22

INTENTIONALLY LEFT BLANK

1. INTRODUCTION

Section 3 includes checklists and detailed procedures to be used in the event of emergencies. Emergencies caused by a malfunction of the aircraft or engine are extremely rare if appropriate maintenance and pre-flight inspections are carried out.

Before operating the aircraft, the pilot should become thoroughly familiar with the present Manual and, in particular, with the present Section. Further, a continued and appropriate training should and self-study should be done.

In case of emergency the pilot should acts as follows:

1. *Keep control of the aeroplane*
2. *Analyse the situation*
3. *Apply the pertinent procedure*
4. *Inform the Air Traffic Control if time and conditions allow.*

Two types of emergency procedures are hereby given:

- a. “Bold faces” which must be known by heart and executed in the correct and complete sequence, as soon as possible as the failure is detected and recognized;
These procedures characters are boxed and highlighted, an example is shown below:

<u>BEFORE ROTATION: ABORT TAKE OFF</u>	
1.	Throttle <i>IDLE</i>
2.	Rudder <i>Keep heading control</i>
3.	--
4.	--

- b. Other procedures which should be well theoretically know and mastered, but that are not time critical and can be executed entering and following step by step the AFM appropriate checklist.

NOTE

For the safe conduct of later flights, any anomaly and/or failure must be communicated to the National Authorities in charge, in order to put the aircraft in a fully operational and safe condition.

NOTE

In this Chapter, following definitions apply:

***Land as soon as possible:** land without delay at the nearest suitable area at which a safe approach and landing is assured.*

***Land as soon as practical:** land at the nearest approved landing area where suitable repairs can be made.*


2. AIRPLANE ALERTS

The alert lights, located on the instrument panel can have the following colours:

- | | |
|---------------------|--|
| <u>GREEN</u> | to indicate that pertinent device is turned ON |
| <u>AMBER</u> | to indicate no-hazard situations that have to be considered and which require a proper crew action |
| <u>RED</u> | to indicate emergency conditions |

2.1. ELECTRIC POWER SYSTEM MALFUNCTION

Alternator Failure Light ON

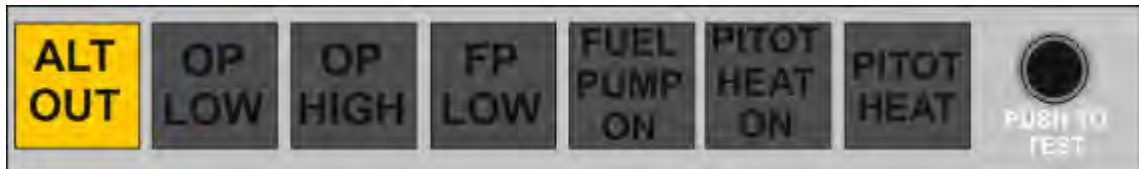

NOTE

Alternator light may illuminate for a faulty alternator or when voltage is above 16V; in this case the over-voltage sensor automatically shuts down the alternator.

If **ALTOUT** caution is **ON**:

1. Verify failure
2. Circuit breaker(s) *Check*
3. Generator switch: *OFF 1 sec. then back ON*

*If **ALTOUT** caution persists **ON**:*

4. Generator switch: *OFF*
5. *Reduce electrical load as much as possible*

6. **Land as soon as practical.**

NOTE

The battery can supply electrical power for at least 30 minutes.

2.2. G3X TOUCH FAILURES

In case of LH or RH display failure, navigation and engine data will be automatically available in the remaining display (split mode).




INSTRUCTION: revert to the remaining display.



Garmin G3X is NOT intended to be used as primary reference for flight and navigation information but only provides information for increased situational awareness. Primary flight information (altitude, airspeed, attitude and slip/skid indication) is provided by MD302.

2.3 PITOT HEATING SYSTEM FAILURE

When the Pitot Heat system is activated, the green **PITOT HEAT ON** safe operating annunciation is **ON**;

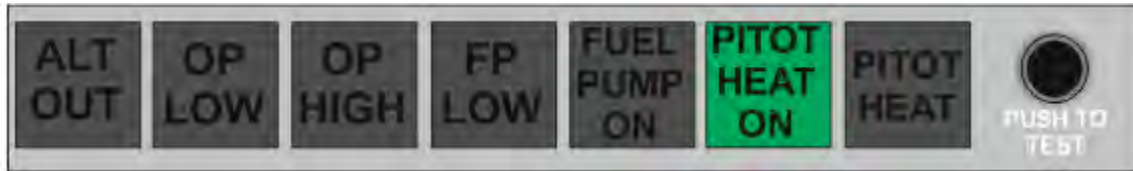

If the amber **PITOT HEAT** is turned ON, but the caution remains ON, the Pitot Heat system is not functioning properly.



In this case apply following procedure:

1. Pitot Heat switch *OFF*
2. Check Pitot Heat circuit breaker *IN*
3. Pitot Heat switch *ON*
4. Check PITOT HEAT caution light:
 If the amber light stays ON, assume PITOT HEAT malfunction.
 Avoid visible moisture conditions.

3. AIRPLANE EVACUATION

With the engine secured and propeller stopped (if practical):

1. **Parking brake:** *ON*
2. **Seat belts:** *unstrap completely*
3. **Headphones:** *REMOVE*
4. **Door:** *OPEN*
5. *Escape away from flames/ hot engine compartment/ spilling fuel tanks/ Hot brakes.*

4. ENGINE SECURING

Following procedure is applicable to shut-down the engine in flight:

1. **Throttle Lever** *IDLE*
2. **Ignition key** *OFF*
3. **Fuel Selector** *OFF*
4. **Electrical fuel pump** *OFF*
5. **Generator switch** *OFF*

5. ENGINE FAILURE

5.1. ENGINE FAILURE DURING TAKE-OFF RUN

- | | |
|--------------|------------------------------|
| 1. Throttle: | <i>IDLE (keep fully out)</i> |
| 2. Rudder: | <i>Keep heading control</i> |
| 3. Brakes: | <i>apply as needed</i> |

when safely stopped:

- | | |
|---------------------------------|-------------|
| 4. Ignition key: | <i>OFF.</i> |
| 5. Fuel selector valve: | <i>OFF</i> |
| 6. Electric fuel pump: | <i>OFF</i> |
| 7. Alternator& Master switches: | <i>OFF.</i> |

5.2. ENGINE FAILURE IMMEDIATELY AFTER TAKE-OFF

- | | |
|--|-----------------------------|
| 1. Speed: | <i>keep minimum 61 KIAS</i> |
| 2. Find a suitable place to land safely. | |



The immediate landing should be planned straight ahead with only small changes in directions not exceeding 45° to the left or 45° to the right.

- | | |
|-----------|------------------|
| 3. Flaps: | <i>as needed</i> |
|-----------|------------------|



Stall speed increases with bank angle and longitudinal load factor. Acoustic stall warning will in any case provides a correct anticipated cue of incipient stall.

At, or right before, touch down

- | | |
|---------------------------------|----------------------------------|
| 4. Throttle: | <i>IDLE (fully out and hold)</i> |
| 5. Ignition key: | <i>OFF</i> |
| 6. Fuel selector valve: | <i>OFF</i> |
| 7. Electric fuel pump: | <i>OFF</i> |
| 8. Alternator& Master switches: | <i>OFF</i> |




A single engine aircraft take off should always be preceded by a thorough take off emergency pilot self-briefing. Decision to try an engine emergency restart right after take off should be taken only if environmental situation requires it: pilot shall never ignore the priority of attentively follow an immediate emergency landing.

After possible mechanical engine seizure, fire or a major propeller damage, engine restart attempt is not recommended.

5.3 ENGINE FAILURES DURING FLIGHT

5.3.1 Low Fuel Pressure

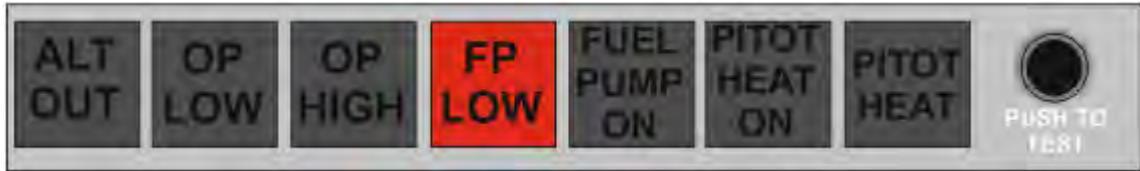

If the fuel pressure indicator falls below 2.2 psi / **FP LOW** warning is **ON**:

1. Electric fuel pump: *ON*
2. Fuel selector valve: *select opposite fuel tank if NOT empty*
3. Fuel quantity indicators: *Check both*

If fuel pressure does not build up:

4. **Land as soon as possible** applying forced landing procedure (See Para. 8)

5.3.2 Low Oil Pressure



If oil pressure is below 12 psi / **OP LOW** warning is ON:

1. Throttle Lever *REDUCE to Minimum practical*
2. **Land as soon as practical**

If oil pressure does not increase and **OP LOW** warning persists ON:

3. **Land as soon as possible** applying forced landing procedure (See Para. 8)

5.3.3 High Oil Temperature

If **OP LOW** warning is **ON**, see para. 5.3.2 “Low Oil Pressure”.

If oil pressure is within limits:

1. Throttle Lever *REDUCE* to *Minimum practical*

If oil temperature does not decrease

2. Airspeed *INCREASE* if practical

NOTE

If oil temperature does not come back within limits, the thermostatic valve regulating the oil flow to the heat exchangers could be damaged, or an oil leakage can be present in the oil supply line.

3. **Land as soon as practical**

If engine roughness, vibrations, erratic behaviour, or high CHT/CT is detected:

4. **Land as soon as possible** applying forced landing procedure (See Para. 8)

5.3.4 CHT/CT limit exceedance

If CHT is above 135°C or CT is above 120°C, apply following procedure:

If **OP LOW** warning is **ON**, see para. 5.3.2 “Low Oil Pressure”.

If oil pressure is within limits:

1. Throttle Lever *REDUCE Minimum practical*
2. **Land as soon as practical**

NOTE

If CHT/CT does not come back within limits, the thermostatic valve regulating the water flow to the cylinder heads, could be damaged or a coolant leakage can be present in the coolant supply line.

If CHT/CT continues to rise and engine shows roughness or power loss:

3. **Land as soon as possible** applying forced landing procedure (See Para. 8)

6. IN-FLIGHT ENGINE RESTART



After a mechanical engine seizure, fire or a major propeller damage engine restart is not recommended.

- | | |
|----------------------------|--|
| 1. Carburettor heat | <i>ON if required</i> |
| 2. Electrical fuel pump | <i>ON</i> |
| 3. Fuel quantity indicator | <i>CHECK</i> |
| 4. Fuel Selector | <i>select opposite tank if not empty</i> |
| 5. Ignition key | <i>BOTH</i> |
| 6. Ignition key | <i>START</i> |
| 7. Throttle lever | <i>SET as required</i> |

In case of unsuccessful engine restart:

1. Engine *SECURE(see engine securing procedure on Para. 4)*
2. **Land as soon as possible** applying forced landing procedure (See Para. 8)

7. SMOKE AND FIRE

7.1. ENGINE FIRE ON THE GROUND

- | | |
|---------------------------------|------------------------------|
| 1. Fuel Selector | <i>OFF</i> |
| 2. Electrical fuel pump | <i>OFF</i> |
| 3. Ignition key | <i>OFF</i> |
| 4. Throttle lever | <i>FULL POWER</i> |
| 5. Cabin Heat | <i>OFF</i> |
| 6. Alternator & Master Switches | <i>OFF</i> |
| 7. Parking Brake | <i>ENGAGED</i> |
| 8. Aircraft Evacuation | <i>carry out immediately</i> |

7.2. ENGINE FIRE DURING TAKEOFF

BEFORE ROTATION: ABORT TAKE OFF

- | | |
|-------------------|----------------------------------|
| 1. Throttle Lever | <i>IDLE (fully out and hold)</i> |
| 2. Rudder | <i>Keep heading control</i> |
| 3. Brakes | <i>As required</i> |

With aircraft under control

- | | |
|---------------------------------|------------------------------|
| 1. Fuel Selector | <i>OFF</i> |
| 2. Electrical fuel pump | <i>OFF</i> |
| 3. Ignition key | <i>OFF</i> |
| 4. Cabin Heat | <i>OFF</i> |
| 5. Alternator & Master Switches | <i>OFF</i> |
| 6. Parking Brake | <i>ENGAGED</i> |
| 7. Aircraft Evacuation | <i>carry out immediately</i> |

7.3. ENGINE FIRE IN-FLIGHT

- | | | |
|----|-----------------------------|--|
| 1. | Cabin heat: | OFF |
| 2. | Fuel selector valve: | OFF |
| 3. | Electric fuel pump: | OFF |
| 4. | Throttle: | FULL FORWARD until the engine stops |
| 5. | Ignition key: | OFF |
| 6. | Cabin vents: | OPEN |



Do not attempt engine restart

7. **Land as soon as possible** applying forced landing procedure(See Para. 7).

7.4. CABIN FIRE / ELECTRICAL SMOKE IN CABIN DURING FLIGHT

- | | | |
|----|---|-------------|
| 1. | Cabin heating: | OFF |
| 2. | Cabin vents: | OPEN |
| 3. | Try to choke the fire. Direct the fire extinguisher towards flame base | |

If smoke persists:

- | | | |
|----|---|------------|
| 4. | Alternator& Master switches: | OFF |
| 5. | Land as soon as possible and evacuate the aircraft | |



If the MASTER SWITCH is set to OFF, consider that flaps extension and pitch trim operation is prevented.

7.5. ELECTRICAL SMOKE/FIRE IN CABIN ON THE GROUND

- | | | |
|----|-----------------------------|------------------------------|
| 1. | Generator switch: | OFF |
| 2. | Throttle Lever: | IDLE |
| 3. | Ignition key: | ALL OFF |
| 4. | Fuel Selector Valve: | OFF |
| 5. | Master Switch: | OFF |
| 6. | Aircraft Evacuation | carry out immediately |



8. LANDING EMERGENCIES

8.1 FORCED LANDING WITHOUT ENGINE POWER

1. Flaps: UP
2. Airspeed: 72 KIAS
3. Find a suitable place to land safely, plan to approach it upwind.
4. Fuel selector valve: OFF
5. Electric fuel pump: OFF
6. Ignition key: OFF
7. Safety belts: Tighten

When certain to land

8. Flaps: *as necessary*
9. Alternator and Master switches: OFF.

NOTE

Glide ratio is 12.8, therefore in zero wind conditions for every 1000ft above Ground Level it is possible to cover ca. 2 NM.

8.2 POWER-ON FORCED LANDING

1. Airspeed: 72KIAS
2. Flaps: UP
3. Locate the most suitable terrain for emergency landing, plan to approach it upwind.
4. Safety belts: Tighten

When certain to land, right before touch down

5. Flaps: *as necessary*
6. Fuel selector valve: OFF
7. Electric fuel pump: OFF
8. Ignition key: OFF
9. Alternator and Master switches: OFF

8.3 LANDING WITH A FLAT NOSE TIRE

1. Pre-landing checklist: Complete
2. Flaps: Land
3. Land and maintain aircraft NOSE HIGH attitude as long as possible.

As aircraft stops

4. Engine securing: Perform(see Para. 4)
5. Airplane evacuation: Perform(see Para. 3)

8.4. LANDING WITH A FLAT MAIN TIRE

If it's suspected a main tire defect or it's reported to be defective:

1. Pre-landing checklist: *Complete*
2. Flaps: *Land*
3. Land the aeroplane on the side of runway opposite to the defective tire to compensate the change in direction which is to be expected during final rolling
4. Touchdown with the GOOD TIRE FIRST and hold aircraft with the flat tire off the ground as long as possible by mean of aileron and rudder control.

As aircraft stops

5. Engine securing: *Perform (see Para. 4)*
6. Airplane evacuation: *Perform (see Para. 3)*

9. RECOVERY FROM UNINTENTIONAL SPIN

If unintentional spin occurs, the following recovery procedure should be used:

- | | |
|---------------------|---|
| 1. Throttle: | <i>IDLE (full out position and hold)</i> |
| 2. Rudder: | <i>full, in the opposite direction of the spin</i> |
| 3. Stick: | <i>centralize and hold neutral</i> |

As the spin stops:

- | | |
|-------------------------------|---|
| 4. Rudder: | <i>SET NEUTRAL</i> |
| 5. Aeroplane attitude: | <i>smoothly recover averting speeds in excess of V_{NE}</i> |
| 6. Throttle: | <i>Readjust to restore engine power.</i> |



*Keep full rudder against rotation until spin has stopped.
One complete turn and recovery takes about 500 feet.*

10. OTHER EMERGENCIES

10.1. UNINTENTIONAL FLIGHT INTO ICING CONDITIONS



WARNING

Airbox carburettor heater is designed to help prevent carburettor ice, less effectively functions as a de-icing system.

NOTE

See TECNAM SIL-2017-02 for further information about Carburettor Heating operation.



WARNING

In case of ice formation on wing leading edge, stall speed could highly increase and stall may become asymmetric. In case of stabilator ice accretion it may lose its efficiency, leading to aircraft pitch up response and loss of control.

1. Carburettor heating: *ON*
2. Immediately fly away from icing conditions (changing altitude and direction of flight, out and below of clouds, visible moisture, precipitations)
3. Controls surfaces: *continue to move to keep free from ice build up*
4. Throttle speed: *increase RPM*
5. Cabin heat: *ON*

10.2 TRIM SYSTEM FAILURE

Trim Jamming

Should trim control be inoperative, act as follows:

1. Breaker: *CHECK IN*
2. LH/RH Trim switch: *CHECK for correct position*

If jamming persists

1. Trim cutout switch: *CHECK ON*
2. Speed: *adjust to control aircraft without excessive stick force*
3. **Land aircraft as soon as possible.**

Trim Runaway

In event of trim runaway, act as follows:

1. Trim cutout switch: *OFF*
2. Speed: *adjust to control aircraft without excessive stick force*
3. **Land aircraft as soon as possible.**

10.3 FLAPS FAILURE

In event of flaps-up landing, account for:

- Approach speed: *65. ~~kt~~ kt* Avionic Master On
Landing length: *35% increased*

10.3 STATIC PORTS FAILURE

In case of static ports failure, the alternate static port in the cabin (identified by the placard below) must be activated.



In this case apply following procedure:

1. Cabin heat *OFF*
2. ALTERNATE STATIC PORT VALVE *OPEN*
3. Continue the mission

SECTION 4 – NORMAL PROCEDURES

INDEX

1.	INTRODUCTION	3
2.	AIRSPEEDS FOR NORMAL OPERATIONS	4
3.	PRE-FLIGHT INSPECTIONS	5
3.1.	Cabin Inspection.....	5
3.2.	Aircraft Walk-around.....	6
4.	CHECKLISTS	12
4.1.	Before Engine Starting (After Pre-flight Inspection).....	12
4.2.	Engine Starting	13
4.3.	Before taxiing	13
4.4.	Taxiing	14
4.5.	Prior to takeoff	14
4.6.	Takeoff and climb	15
4.7.	Cruise	15
4.8.	Before Landing	16
4.9.	Balked landing/missed approach	16
4.10.	After landing	16
4.11.	Engine shut down	17
4.12.	Post-flight checks.....	17

INTENTIONALLY LEFT BLANK

1. INTRODUCTION

Section 4 describes checklists and recommended procedures for the conduct of normal operations for *P2008 JC* aircraft.



Garmin G3X indeed is NOT intended to be used as primary reference for flight and navigation information but only provides information for increased situational awareness. Primary flight information (altitude, airspeed, attitude and slip/skid indication) is provided by MD302.

2. AIRSPEEDS FOR NORMAL OPERATIONS

The following airspeeds are those which are significant for normal operations.

	FLAPS	650kg
Rotation Speed (V_R)	T/O	50 KIAS
Flap Retraction Speed (V_{OBS})	T/O	61 KIAS
Best Angle-of-Climb Speed (V_X)	0°	64 KIAS
Best Rate-of-Climb speed (V_Y)	0°	68 KIAS
Approach speed	T/O	61 KIAS
Final Approach Speed	FULL	55 KIAS
Touch Down Speed	FULL	55 KIAS
Balked Landing Speed	FULL	61 KIAS
Manoeuvring speed (V_A)	0°	98 KIAS
Never Exceed Speed (V_{NE})	0°	143 KIAS

3. PRE-FLIGHT INSPECTIONS

Before each flight, it is necessary to carry out a complete aircraft check including a cabin inspection followed by an external inspection, as below detailed.

3.1. CABIN INSPECTION

- A Aircraft documents (ARC, Certificate of Airworthiness, Noise certificate, Radio COM certificate, AFM): *check current and on board*
- B Weight and balance: *calculate (ref. to Section 6) and check within limits*
- C Safety belts: *connected to hard points, check condition*
- D Ignition key: *OFF, key extracted*
- E Master switch: *ON*
- F Voltmeter: *check within the limits*
- G Lights: *all ON, check for operation*
- H Acoustic stall warning: *check for operation*
- I Master switch: *OFF*
- J Baggage: *check first aid kit, ELT, fire extinguisher, luggage secured with restraint net.*

3.2. AIRCRAFT WALK-AROUND

To perform the aircraft walk-around, carry out the checklists according to the pattern shown in Figure 4-1.



Visual inspection is defined as follows: check for defects, cracks, detachments, excessive play, unsafe or improper installation as well as for general condition. For control surfaces, visual inspection also involves additional check for freedom of movement and security. Red lubber lines on bolts and nuts shall be intact.



Fuel level indicated by the fuel quantity indicators must be verified by visual check of actual fuel quantity embarked in the tanks: graduated dipstick must be used.



If ignitions key is in L/R/BOTH position, a propeller movement can cause the engine starting with consequent hazard for people nearby.



Fuel drainage operation must be carried out with the aircraft parked on a level surface. Set Cockpit Fuel Selector Valve to ON prior to drain fuel.

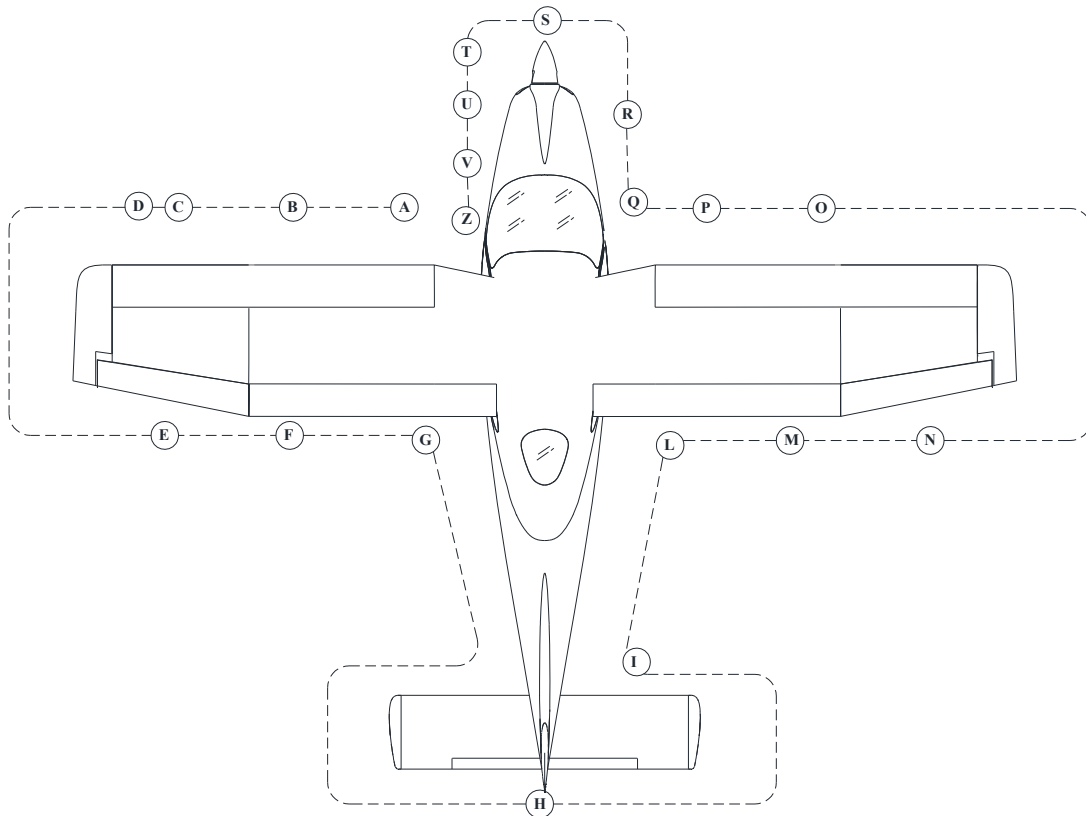


Figure 4.1

- | | | |
|----------|--|---|
| A | Left fuel filler cap | <i>CHECK</i> desired fuel level (use graduated dipstick). Drain the left fuel tank sump by quick drain valve using a cup to collect fuel (drainage operation must be carried with the aircraft parked on a level surface). Check for water or other contaminants. Make sure filler cap is closed. |
| B | Pitot tube | <i>REMOVE</i> pitot plug and check the pitot for obstructions. Do not blow inside pitot tube. |
| C | Left side leading edge and wing skin | <i>Visual inspection, CHECK</i> stall strips |
| D | Left strobe light | <i>Visual inspection, CHECK</i> for integrity and fixing |
| E | Left aileron, hinges and LH tank vent line | <i>CHECK</i> for damage, freedom from plays; Left tank vent: <i>CHECK</i> for obstructions. |
| F | Left flap and hinges | <i>Visual inspection</i> |

- G** Left main landing gear *CHECK inflation, tire condition, alignment, fuselage skin condition. Check fuselage skin status, tire status (cuts, bruises, cracks and excessive wear), slippage markers integrity, gear structure and brakes hoses: there should be no sign of hydraulic fluid leakage.*
- H** Stabilator and tab *CHECK stabilator leading edge. Check the actuating mechanism of stabilator and the connection with related tab: CHECK free of play, friction. CHECK fuselage bottom and top skin. CHECK antennas for integrity.*
- I** Vertical tail and rudder *Visual inspection, check free of play, friction.*
- L** Right main landing gear *CHECK inflation, tire condition, alignment, fuselage skin condition. Check fuselage skin status, tire status (cuts, bruises, cracks and excessive wear), slippage markers integrity, gear structure and brakes hoses: there should be no sign of hydraulic fluid leakage.*
- M** Right flap and hinges *Visual inspection*
- N** Right aileron, hinges and RH tank vent line *Visual inspection, check free of play, friction; Right side tank vent: check for obstructions.*
- O** Right strobe light, leading edge and wing skin *Visual inspection, CHECK stall strips, CHECK strobe light for integrity and fixing*
- P** Stall indicator switch *CHECK for integrity and free of play,*
- Q** Right fuel filler cap *CHECK desired fuel level (use graduated dipstick). Drain the right fuel tank sump by quick drain valve using a cup to collect fuel (drainage operation must be carried with the aircraft parked on a level surface). Check for water or other contaminants. Make sure filler cap is closed.*
- R** Nose wheel strut and tire/
RH static port *CHECK inflation, tire condition and condition of shock absorber: there should be no sign of hydraulic fluid leakage. Check the right static port for obstructions.*
- S** Propeller and spinner condition *CHECK for nicks, cracks, dents and other defects, propeller should rotate freely. Check fixing and lack of play between blades and hub.*

T Check the engine cowling surface conditions, then open engine inspection doors and perform the following checks:

- a) *Nacelle inlets and exhausts openings must be free of obstructions. Check connection and integrity of air intake system, visually inspect that ram air intake is unobstructed. If inlet and outlet plugs are installed, they must be removed.*
- b) *Check radiators. There should be no indication of leakage of fluid and they have to be free of obstructions.*
- c) *Check for foreign objects*
- d) *Only before the first flight of a day:*
 - (1) *Verify coolant level in the expansion tank, replenish as required up to top (level must be at least 2/3 of the expansion tank).*
 - (2) *Verify coolant level in the overflow bottle: level must be between min. and max. mark.*



Before proceeding to the next step be sure that magnetos and Master switch are OFF with the key extracted.

- (3) *Turn the propeller by hand to and from, feeling the free rotation of 15° or 30° before the crankshaft starts to rotate. If the propeller can be turned between the dogs with practically no friction at all further investigation is necessary. Turn propeller by hand in direction of engine rotation several times and observe engine for odd noises or excessive resistance and normal compression.*
- (4) *Carburetors: check the throttle and choke cables for condition and installation.*
- (5) *Exhaust: inspect for damages, leakage and general condition.*
- (6) *Check engine mount and silent-blocks for condition.*
- e) *Check oil level and replenish as required. Prior to oil check, switch off both ignitions circuits and turn the propeller by hand in direction of engine rotation several times to pump oil from the engine into the oil tank, or let the engine idle for 1 minute. This process is finished when air is returning back to the oil tank and can be noticed by a murmur from the open oil tank. Prior to long flights oil should be added so that the oil level reaches the “max” mark.*
- f) *Drain off Gascolator for water and sediment (drain until no water comes off). Then make sure drain valve is closed.*
- g) *Check drainage hoses free of obstructions*
- h) *Verify all parts are fixed or locked: inspect fuel circuit for leakages.*

U Engine cowling doors *CLOSE, check for proper alignment of camlocks*

V Landing/Taxi light and LH static port *CHECK, Visual inspection for integrity. Right side tank vent: check for obstructions.*

Z Tow bar and chocks

REMOVE, stow on board pitot, static ports and stall warning protective plugs.

Windshield and windows

INSPECT for cracks, erosion, crazing, visibility and cleanliness.

NOTE

Avoid blowing inside Pitot tube and inside airspeed indicator system's static ports as this may damage instruments.

...then Avionic Master On

INTENTIONALLY LEFT BLANK

4. CHECKLISTS

4.1. BEFORE ENGINE STARTING (AFTER PRE-FLIGHT INSPECTION)

1. Seat position and safety belts: *adjust*



In-flight seat release can cause the loss of airplane control. Check that occupied seats are positively locked: after seat adjustment, make sure that the adjustment lever is well aligned with the aircraft longitudinal axis (neutral position) and that has a springback return to the neutral position.

2. Flight controls: operate full stroke checking for movement smoothness, free of play and friction.
3. Parking brake: *engage*
4. Throttle friction: *adjust*
5. Circuit Breakers: *check all IN*
6. Master switch: *ON, Check ALT OUT caution ON and check Voltmeter*
7. Pitot heating system (if installed): *make sure plug is removed, set to ON, CHECK advisory light ON. After about 5 seconds, turn OFF Pitot heating system. Check Pitot if warm.*
8. Electric fuel pump: *ON (check for audible pump noise)*
9. Electric fuel pump: *OFF* n
10. Avionic Master switch: *ON, check instrument*
11. Flap control: *cycle fully extended and then set to T/O*
12. Pitch Trim: *cycle fully up and down, from both LH and RH controls, check for trim disconnect switch operation then set neutral.*



Pitch trim position other than in neutral position would affect take off performance and take off rotation execution at the correct V_R .

13. Nav. light & Strobe light: *ON*
14. Fuel quantity: *compare the fuel quantity indicators information with fuel quantity visually checked into the tanks (see Pre-flight inspection – External inspection)*

NOTE

In absence of RH seat occupant: fasten seat belts around the seat so as to prevent any interference with the aeroplane flight control operation and with rapid egress in an emergency.

15. Doors: *Closed and locked*



Avionic Master switch must be set OFF during the engine's start-up to prevent avionic equipment damage.

4.2. ENGINE STARTING

Confirm Avionics Master Off

1. Engine throttle *IDLE*
2. Choke *AS NEEDED*
3. Fuel selector valve *SELECT the tank with less fuel*
4. Electric fuel pump *ON*
5. Propeller area *CALL for clear and visually check*



Check to insure no person or object is present in the area close to the propeller. Forward lower sector visibility is not possible from inside the cockpit.

WARNING

6. External lights *AS REQUIRED*
7. Ignition key *START*
8. Check oil pressure rises within 10 sec.
9. Generator switch *ON* ... then Avionic Master On
10. Voltmeter *CHECK more 14V or more*
11. Engine instruments *Check within the limits*
12. Choke *OFF*
13. Propeller rpm *1000-1200 prop. RPM*
14. Electric fuel pump *OFF*
15. Fuel pressure *CHECK within limits*

Copy ATIS (Jersey 134.680)

4.3. BEFORE TAXIING

1. Radio *ON*
2. Avionic Master *CHECK ON*
3. Altimeter *SET*
4. Landing light / Taxi light (if installed): *ON*
5. Parking brake *OFF and taxi*

4.4. TAXIING

- 1. Brakes *CHECK*
- 2. Flight instruments *CHECK*

4.5. PRIOR TO TAKE OFF

- 1. Parking brake *brake pedal press, ON*
- 2. *Check engine parameters within limits and all caution/warning alerts OFF*
- 3. ALT OUT caution *CHECK OFF*
- 4. Electric Fuel pump *ON*
- 5. Fuel selector valve *SELECT the fullest tank*
- 6. Fuel pressure *CHECK*
- 7. Throttle speed *ADVANCE throttle to 1640 prop. RPM*
 - a. Ignition key test *SELECT LEFT, check speed drop within 130 prop RPM;*
 - b. Select BOTH *CHECK propeller speed 1640 prop. RPM;*
 - c. Select RIGHT *CHECK speed drop within 130 prop. RPM;*
 - d. *Maximum difference of speed between LEFT and RIGHT 50 prop. RPM;*
 - e. Select BOTH *CHECK propeller speed 1640 prop. RPM.*
- 8. Carburettor heat test:
 - a. *Pull selector fully OUT*
 - b. Throttle speed *CHECK 100 prop. RPM drop*
 - c. *Push selector fully IN*
 - d. Engine speed *CHECK 1640 prop. RPM* ... then Close throttle, check idle, reset 1000 rpm
- 9. Flaps position *T/O (15°)*
- 10. Pitch trim *CHECK neutral*
- 11. Flight controls *CHECK free*
- 12. Seat belts *CHECKED fastened*
- 13. Doors *CHECK closed and locked.*

4.6. TAKEOFF AND CLIMB



Flight information provided by G3X is only for situational awareness. Refer to primary flight instruments.



On uncontrolled fields, before line up, check runway wind direction and speed and check for traffic on final.

- | | |
|-----------------------|---|
| 1. Landing light | <i>AS REQUIRED</i> |
| 2. Parking brake | <i>OFF</i> |
| 3. Carburettor heat | <i>OFF</i> |
| 4. Full throttle | <i>SET and check approximately 2100 ± 100 prop. RPM</i> |
| 5. Engine instruments | <i>CHECK parameters within limits</i> |

When V_R is reached

- | | |
|--|---|
| 6. Rotate | |
| 7. Flaps | <i>RETRACT (speed above V_{OBS})</i> |
| 8. Establish Climb rate | |
| 9. Landing and Taxi light (if installed) | <i>OFF</i> |
| 10. Electric fuel pump | <i>OFF</i> |
| 11. Fuel pressure | <i>CHECK within limits</i> |
| 12. Throttle | <i>REDUCE engine speed at or below 2250 prop. RPM</i> |

4.7. CRUISE

- | | |
|---------------------|--|
| 1. Throttle | <i>SET engine speed at or below 2250 prop. RPM</i> |
| 2. | <i>Check engine parameters within limits and all cautions/warnings OFF</i> |
| 3. Carburettor heat | <i>AS NEEDED</i> |

NOTE

Monitor and manually compensate asymmetrical fuel consumption by switching fuel selector valve. Switch on the electric fuel pump prior to swap the fuel feeding from one tank to another.

4.8. BEFORE LANDING

1. Electric fuel pump *ON*
2. Fuel valve *SELECT* the fullest tank
3. Landing Light *ON*

On downwind, leg abeam touch down point:

4. Flaps position *T/O*
5. Establish Approach Speed

On final leg:

6. Flaps *FULL*
7. Establish Final Approach Speed
8. Carburettor heat *OFF* (full IN)

4.9. BALKED LANDING / MISSED APPROACH

1. Throttle *FULL*
2. Speed *KEEP* over *Balked Landing Speed*
3. Flaps position *T/O*

Only after positive climb rate is established:

4. Flaps *RETRACT*
5. Landing Light *OFF*
6. Electric fuel pump *OFF*
7. Throttle *REDUCE* engine speed at or below 2250 prop. RPM

4.10. AFTER LANDING

1. Flaps *UP*
2. Electric Fuel Pump *OFF*
3. Taxi Light (if installed) *ON* when required
4. Landing Light *OFF* when required

4.11. ENGINE SHUT DOWN

1. Parking brake *ENGAGE*
2. *Keep engine running at 1200 propeller RPM for about one minute in order to reduce latent heat*
3. Avionic equipment *OFF*
4. Ignition key *OFF, keys extracted*
5. All external lights *OFF*
6. Master & Generator switches *OFF*
7. Fuel selector valve *OFF*



WARNING

Before disembarkation verify propeller is fully stopped.



CAUTION

Instruct passenger to fully open RH door and depart, avoiding contact with wheels and sharp wing control surfaces edges.

4.12. POST-FLIGHT CHECKS

1. Flight controls *LOCK by mean of seat belts*
2. Wheel chocks *SET*
3. Wing mooring lines *SET*
4. Parking brake *RELEASE*
5. Doors *CLOSE and LOCK*
6. Protection plugs *SET over pitot tube, stall warning, static ports*

INTENTIONALLY LEFT BLANK

SECTION 5 – PERFORMANCE

1. INTRODUCTION	2
2. USE OF PERFORMANCE CHARTS	2
3. AIRSPEED INDICATOR SYSTEM CALIBRATION	3
4. ICAO STANDARD ATMOSPHERE	4
5. STALL SPEED	5
6. CROSSWIND	6
7. TAKE-OFF PERFORMANCE	7
8. TAKE-OFF RATE OF CLIMB	10
9. EN-ROUTE RATE OF CLIMB	11
10. CRUISE PERFORMANCE	12
11. LANDING PERFORMANCE	14
12. BALKED LANDING PERFORMANCE	15
13. NOISE DATA	15

1. INTRODUCTION

This section provides all necessary data for an accurate and comprehensive planning of flight activity from take-off to landing.

Data reported in graphs and/or in tables were determined using:

- ✓ “Flight Test Data” under conditions prescribed by EASA CS-VLA regulation
- ✓ aircraft and engine in good condition
- ✓ average piloting techniques

Each graph or table was determined according to ICAO Standard Atmosphere (ISA - s.l.); evaluations of the impact on performance were carried out by theoretical means for:

- ✓ Airspeed
- ✓ External temperature
- ✓ Altitude
- ✓ Weight
- ✓ Runway type and condition

2. USE OF PERFORMANCE CHARTS

Performance data are presented in tabular or graphical form to illustrate the effect of different variables such as altitude, temperature and weight. Given information is sufficient to plan the mission with required precision and safety.

Additional information is provided for each table or graph.

3. AIRSPEED INDICATOR SYSTEM CALIBRATION

Graph shows calibrated airspeed V_{IAS} as a function of indicated airspeed V_{CAS} .

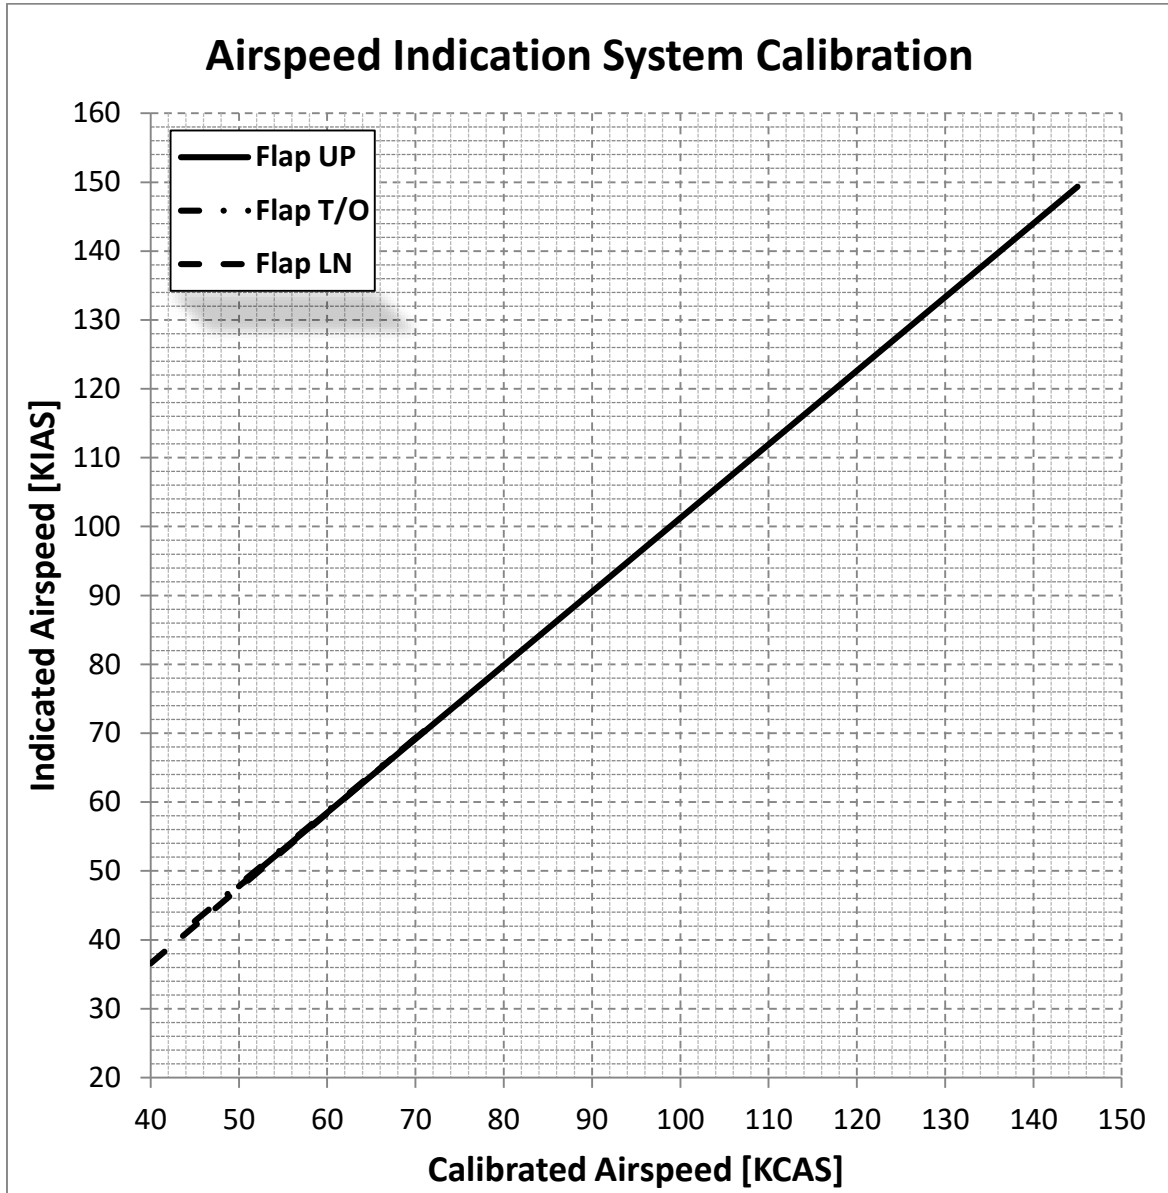


FIG. 5-1. CALIBRATED VS INDICATED AIRSPEED

Example:

Given

KIAS 75.0

Flap: UP

Found

KCAS 74.5

NOTE

Indicated airspeed assumes 0 as an instrument error

4. ICAO STANDARD ATMOSPHERE

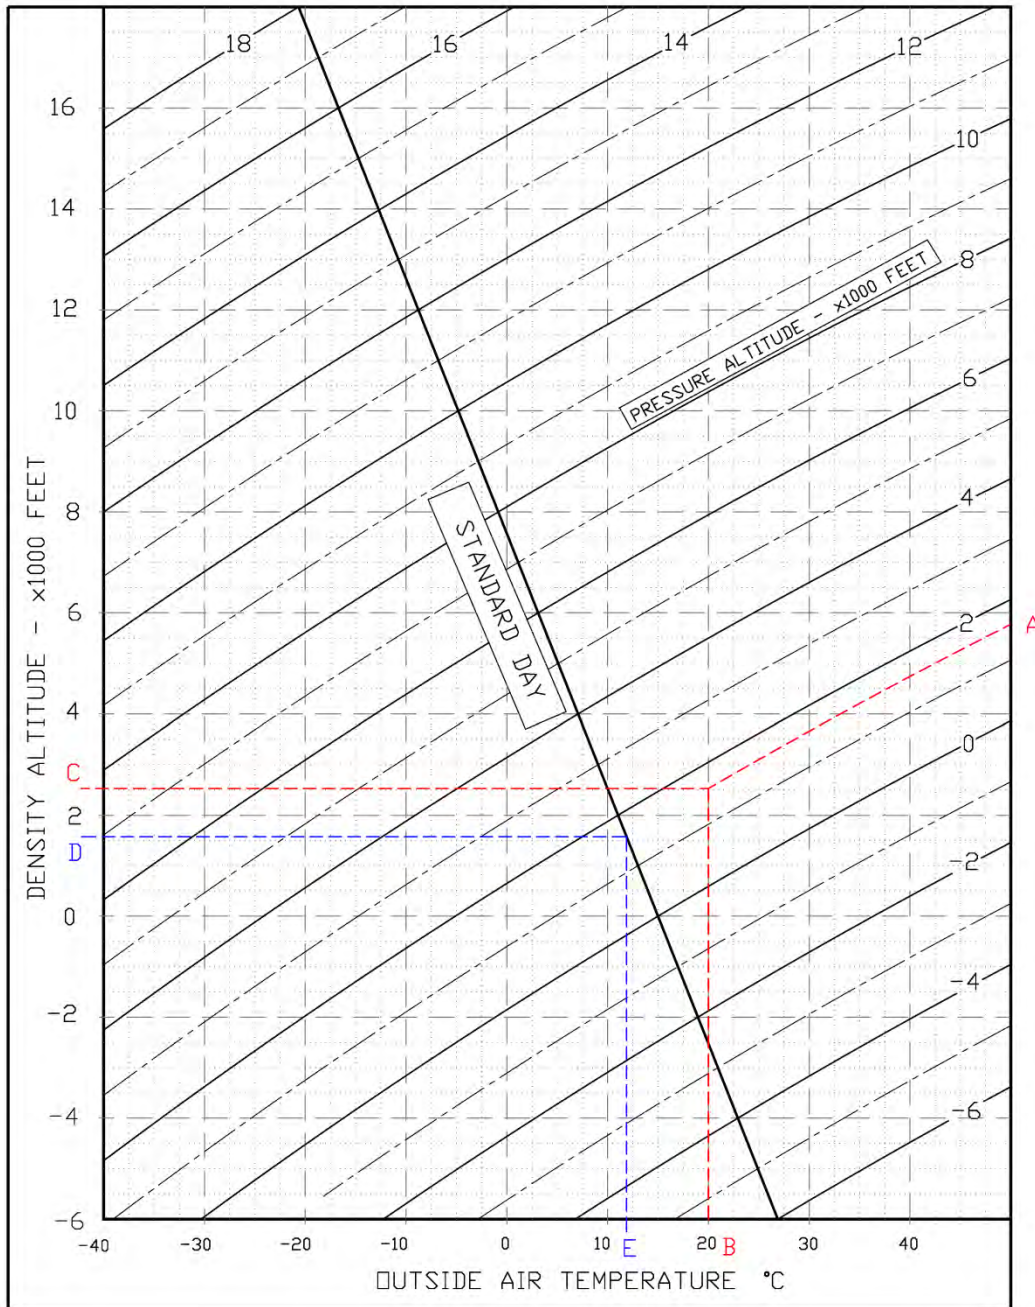


FIG. 5-2. ICAO CHART

Examples:

<u>Scope</u>	<u>Given</u>	<u>Find</u>
<u>DensityAltitude:</u>	A: Pressure altitude = 1600ft B: Temperature = 20°C	→ C: DensityAltitude = 2550ft
<u>ISA Temperature:</u>	D: Pressure altitude = 1600ft	→ E: ISA Air Temperature = 12°C

5. STALL SPEED

Weight: 650 kg Throttle Levers: IDLE CG: Most Forward (20%) No ground effect							
WEIGHT [kg]	BANK ANGLE [deg]	STALL SPEED					
		FLAPS 0°		FLAPS T/O		FLAPS FULL	
		KIAS	KCAS	KIAS	KCAS	KIAS	KCAS
650 (FWD C.G.)	0	49	51	46	48	40	44
	15	50	52	46	49	41	44
	30	53	55	49	51	44	47
	45	59	61	55	57	49	52
	60	71	72	67	67	60	62

NOTE

Altitude loss during conventional stall recovery, as demonstrated during flight tests is approximately 350 ft with banking below 30°.

6. CROSSWIND

Maximum demonstrated crosswind is 15Kts

⇒Example:

Given

Wind direction (with respect to aircraft longitudinal axis)= 30°

Wind speed = 20 Kts

Found

Headwind = 17.5 Kts

Crosswind = 10 Kts

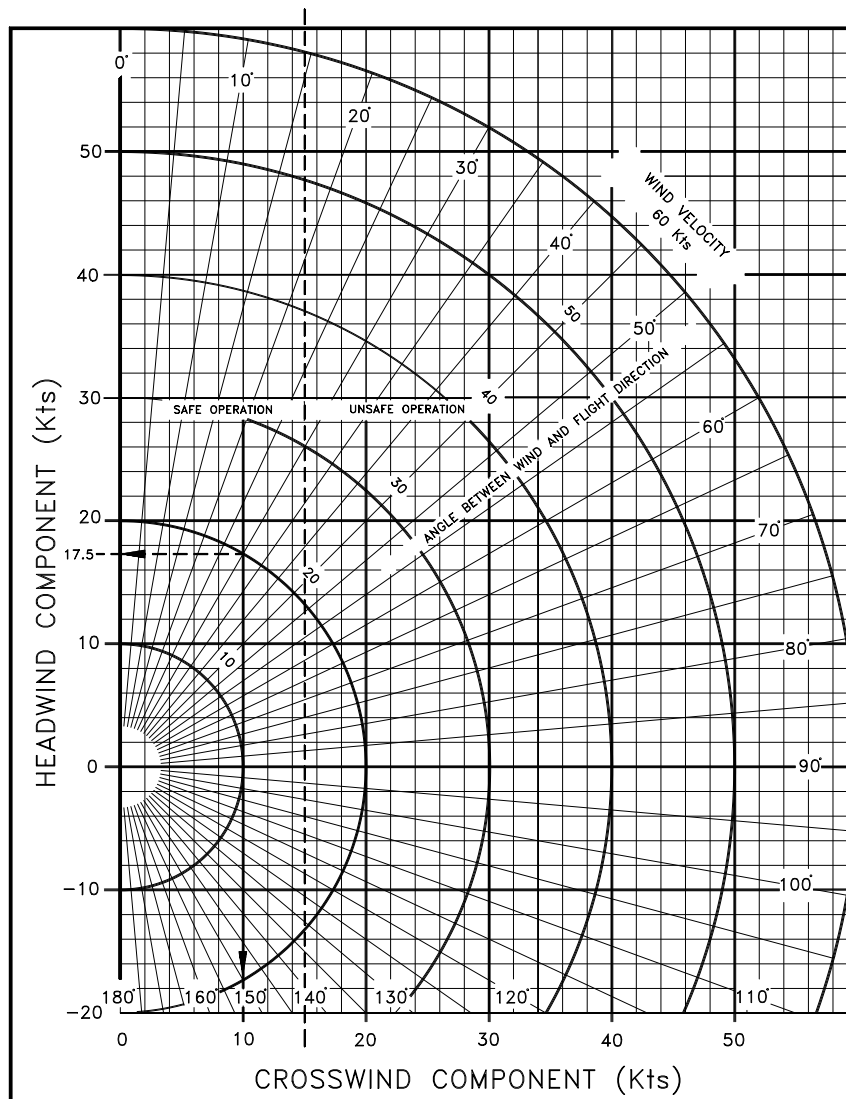


FIG. 5-2. CROSSWIND CHART

7. TAKE-OFF PERFORMANCE

NOTE

To account for likely in service performance variations apply a factored to distances of 1.10

Pressure Altitude [ft]		Distance [m]				
		Temperature [°C]				ISA
		-25	0	25	50	
S.L.	Ground Roll	149	187	231	280	213
	At 50 ft AGL	262	328	401	484	371
1000	Ground Roll	162	204	252	306	228
	At 50 ft AGL	285	356	437	526	397
2000	Ground Roll	177	223	275	334	245
	At 50 ft AGL	311	388	475	572	425
3000	Ground Roll	193	244	301	365	263
	At 50 ft AGL	338	422	517	623	455
4000	Ground Roll	211	266	328	398	283
	At 50 ft AGL	368	460	564	679	488
5000	Ground Roll	231	291	359	436	304
	At 50 ft AGL	402	502	614	740	524
6000	Ground Roll	253	319	393	477	327
	At 50 ft AGL	438	547	670	808	562
7000	Ground Roll	277	349	430	522	352
	At 50 ft AGL	478	597	732	882	603
8000	Ground Roll	304	382	472	572	379
	At 50 ft AGL	522	652	799	963	648
9000	Ground Roll	333	419	517	627	409
	At 50 ft AGL	571	713	874	1053	696
10000	Ground Roll	365	460	567	688	441
	At 50 ft AGL	624	780	956	1152	748

Weight = 600 kg Flaps: T/O Speed at Lift-Off = 50 KIAS Speed Over 50ft Obstacle = 61 KIAS Throttle Levers: Full Forward Runway: Grass		Corrections Headwind: - 5 m for each kt (16 ft/kt) Tailwind: + 15 m for each kt (49 ft/kt) Paved Runway: - 10% to Ground Roll Runway slope: + 7% to Ground Roll for each +1%				
Pressure Altitude		Distance [m]				ISA
		Temperature [°C]				
[ft]		-25	0	25	50	
S.L.	Ground Roll	123	155	191	231	176
	At 50 ft AGL	218	272	333	402	308
1000	Ground Roll	134	169	208	252	188
	At 50 ft AGL	237	296	363	437	330
2000	Ground Roll	146	184	227	275	202
	At 50 ft AGL	258	322	395	476	353
3000	Ground Roll	160	201	248	301	217
	At 50 ft AGL	281	351	430	518	378
4000	Ground Roll	174	220	271	329	234
	At 50 ft AGL	306	382	468	564	406
5000	Ground Roll	191	240	296	360	251
	At 50 ft AGL	334	417	510	615	435
6000	Ground Roll	209	263	324	394	270
	At 50 ft AGL	364	455	557	671	467
7000	Ground Roll	229	288	355	431	291
	At 50 ft AGL	397	496	608	732	501
8000	Ground Roll	251	315	389	472	313
	At 50 ft AGL	434	542	664	800	538
9000	Ground Roll	275	346	427	518	337
	At 50 ft AGL	474	592	726	875	578
10000	Ground Roll	301	379	468	568	364
	At 50 ft AGL	519	648	794	957	622

Weight = 550 kg Flaps: T/O Speed at Lift-Off = 50 KIAS Speed Over 50ft Obstacle = 61 KIAS Throttle Levers: Full Forward Runway: Grass		Corrections Headwind: - 5 m for each kt (16 ft/kt) Tailwind: + 15 m for each kt (49 ft/kt) Paved Runway: - 10% to Ground Roll Runway slope: + 7% to Ground Roll for each +1%				
Pressure Altitude		Distance [m]				ISA
		Temperature [°C]				
[ft]		-25	0	25	50	
S.L.	Ground Roll	100	125	155	188	143
	At 50 ft AGL	178	223	273	329	252
1000	Ground Roll	109	137	169	205	153
	At 50 ft AGL	194	242	297	357	270
2000	Ground Roll	119	149	184	224	164
	At 50 ft AGL	211	263	323	389	289
3000	Ground Roll	130	163	201	244	176
	At 50 ft AGL	230	287	351	423	309
4000	Ground Roll	142	178	220	267	190
	At 50 ft AGL	250	313	383	461	332
5000	Ground Roll	155	195	241	292	204
	At 50 ft AGL	273	341	417	503	356
6000	Ground Roll	169	213	263	319	219
	At 50 ft AGL	298	372	455	549	382
7000	Ground Roll	186	234	288	350	236
	At 50 ft AGL	325	406	497	599	410
8000	Ground Roll	203	256	316	383	254
	At 50 ft AGL	355	443	543	654	440
9000	Ground Roll	223	281	346	420	274
	At 50 ft AGL	388	484	593	715	473
10000	Ground Roll	245	308	380	461	295
	At 50 ft AGL	424	530	649	782	508

8. TAKE-OFF RATE OF CLIMB

NOTE

To account for likely in service performance variations apply a factored to rate of climb of 0.90

Throttle Levers: Full Forward							
Flaps: Take Off (15°)							
Weight	Pressure Altitude	Climb Speed V _Y	Rate of Climb [ft/min]				ISA
			Temperature [°C]				
[kg]	[ft]	[KIAS]	-25	0	25	50	
650	S.L.	65	897	756	629	516	678
	2000	64	790	651	527	415	594
	4000	64	682	546	424	314	510
	6000	64	576	442	322	214	426
	8000	64	469	338	220	114	342
	10000	64	363	234	118	14	258
	12000	64	258	131	17	-85	174
	14000	64	152	28	-84	-184	90
600	S.L.	64	1014	864	731	610	782
	2000	64	900	753	622	504	693
	4000	64	787	642	513	397	605
	6000	63	674	532	405	291	516
	8000	63	561	422	297	185	427
	10000	63	449	312	190	80	338
	12000	63	337	203	83	-25	249
	14000	63	226	94	-24	-130	160
550	S.L.	64	1148	989	846	718	901
	2000	63	1027	870	730	604	807
	4000	63	906	752	615	491	712
	6000	62	786	635	500	378	617
	8000	62	666	517	385	265	522
	10000	61	547	401	270	153	428
	12000	61	427	284	156	41	333
	14000	60	309	168	43	-70	238

9. EN-ROUTE RATE OF CLIMB

NOTE

To account for likely in service performance variations apply a factored to rate of climb of 0.90

Throttle Levers: Full Forward		Flaps: UP					
Weight	Pressure Altitude	Climb Speed V_Y	Rate of Climb [ft/min]				ISA
			Temperature [°C]				
[kg]	[ft]	[KIAS]	-25	0	25	50	
650	S.L.	67	998	840	702	576	754
	2000	67	882	729	592	468	667
	4000	67	764	613	479	357	574
	6000	67	646	498	366	246	481
	8000	68	529	383	253	136	388
	10000	68	412	269	141	26	295
	12000	68	295	155	29	-84	202
	14000	68	179	41	-82	-193	109
600	S.L.	66	1128	962	813	679	871
	2000	66	1002	838	692	560	772
	4000	67	876	715	571	442	673
	6000	67	750	592	451	323	574
	8000	67	625	469	331	206	474
	10000	67	500	347	211	88	375
	12000	67	375	225	92	-29	276
	14000	68	251	104	-27	-145	177
550	S.L.	65	1275	1096	936	792	998
	2000	66	1139	963	806	664	892
	4000	66	1003	830	676	536	785
	6000	66	868	698	546	409	678
	8000	67	733	566	417	282	572
	10000	67	599	435	288	156	465
	12000	67	465	304	160	30	358
	14000	67	331	173	32	-95	252

10. CRUISE PERFORMANCE



Propeller speed over 2265 RPM is restricted to 5min.

Weight = 650 kg							
CORRECTIONS							
	KTAS	Fuel Consumption	Endurance	Range	Specific Range		
For each +15°C of OAT	-2%	-2.5%	+2%	+1%	+1%		
For each -15°C of OAT	+1%	+3%	-4%	-2%	-1%		
For -100kg of weight	+3.3%	-	-	+3%	+4%		
CRUISE PERFORMANCE							
Pressure Altitude [ft]	OAT ISA [deg C]	Propeller RPM	KTAS	Fuel Consumption [lt/hr]	Endurance [hr:mm]	Range [nm]	Specific Range [nm/lt]
0	15	2388	116	27.7	4:20	503	4.2
		2250	109	25.8	4:39	507	4.2
		2100	100	22.1	5:26	543	4.5
		2000	94	19.5	6:09	579	4.8
		1900	88	17.6	6:49	600	5.0
		1800	81	15.9	7:33	611	5.1
2000	11	2250	108	25	4:48	518	4.3
		2100	99	20.9	5:44	568	4.7
		2000	93	18.8	6:23	594	5.0
		1900	87	17	7:04	614	5.1
		1800	81	15.5	7:45	627	5.2

Weight = 650 kg							
CORRECTIONS							
	KTAS	Fuel Consumption	Endurance	Range	Specific Range		
For each +15°C of OAT	-2%	-2.5%	+2%	+1%	+1%		
For each -15°C of OAT	+1%	+3%	-4%	-2%	-1%		
For -100kg of weight	+3.3%	-	-	+3%	+4%		
CRUISE PERFORMANCE							
Pressure Altitude [ft]	OAT ISA [deg C]	Propeller RPM	KTAS	Fuel Consumption [lt/hr]	Endurance [hr:mm]	Range [nm]	Specific Range [nm/lt]
4000	7	2250	106	23.9	5:01	532	4.4
		2100	98	20	6:00	588	4.9
		2000	92	18.1	6:38	610	5.1
		1900	86	16.5	7:16	626	5.2
		1800	79	15.2	7:54	624	5.2
6000	3	2250	105	22.7	5:17	555	4.6
		2100	97	19.2	6:15	606	5.1
		2000	91	17.5	6:51	624	5.2
		1900	85	16.1	7:27	634	5.3
		1800	78	14.9	8:03	628	5.2
8000	-1	2250	104	21.5	5:35	581	4.8
		2100	96	18.5	6:29	623	5.2
		2000	90	17	7:04	635	5.3
		1900	84	15.7	7:39	642	5.4
10000	-5	2250	103	20.5	5:51	603	5.0
		2100	95	17.9	6:42	637	5.3
		2000	89	16.6	7:14	643	5.4
		1900	82	15.5	7:45	635	5.3

11. LANDING PERFORMANCE

NOTE

To account for likely in service performance variations apply a factored to distances of 1.67

Weight = 650 kg		Corrections				
Flaps: LAND		Headwind: -4m for each kt (13 ft/kt)				
Short Final Approach Speed = 54 KIAS		Tailwind: + 13m for each kt (43 ft/kt)				
Throttle Levers: Idle		Paved Runway: -10% to Ground Roll				
Runway: Grass		Runway slope: -3% to Ground Roll for each +1%				
Pressure Altitude [ft]		Distance [m]				
		Temperature [°C]				ISA
		-25	0	25	50	
S.L.	Ground Roll	149	164	179	194	173
	At 50 ft AGL	358	373	388	403	382
1000	Ground Roll	154	170	186	201	178
	At 50 ft AGL	363	379	395	410	387
2000	Ground Roll	160	176	192	209	183
	At 50 ft AGL	369	385	401	418	392
3000	Ground Roll	166	183	200	216	189
	At 50 ft AGL	375	392	409	425	398
4000	Ground Roll	172	190	207	225	195
	At 50 ft AGL	381	399	416	434	404
5000	Ground Roll	179	197	215	233	201
	At 50 ft AGL	388	406	424	442	410
6000	Ground Roll	186	205	223	242	207
	At 50 ft AGL	395	414	432	451	416
7000	Ground Roll	193	212	232	251	213
	At 50 ft AGL	402	421	441	460	422
8000	Ground Roll	200	221	241	261	220
	At 50 ft AGL	410	430	450	470	429
9000	Ground Roll	208	229	250	271	227
	At 50 ft AGL	417	438	459	480	436
10000	Ground Roll	217	238	260	282	234
	At 50 ft AGL	426	447	469	491	443

12. BALKED LANDING PERFORMANCE

NOTE

To account for likely in service performance variations apply a factored to rate of climb and to angle of climb of 0.90

Throttle Levers: Full Forward						
Flaps: LAND						
Speed: 54 KIAS						
Weight	Pressure Altitude	Angle of Climb [deg]				ISA
		Temperature [°C]				
[kg]	[ft]	-25	0	25	50	
650	S.L.	10.3	8.2	6.3	4.6	7.0
	2000	8.7	6.6	4.7	3.0	5.8
	4000	7.1	5.0	3.2	1.5	4.5
	6000	5.5	3.4	1.6	0.0	3.2
	8000	3.9	1.9	0.1	-1.5	1.9
	10000	2.3	0.3	-1.4	-3.0	0.7
	12000	0.7	-1.3	-3.0	-4.5	-0.6
	14000	-0.9	-2.8	-4.5	-6.0	-1.9

13. NOISE DATA

Noise level, determined in accordance with ICAO/Annex 16 6th Ed., July 2011, Vol. I°, Chapter 10, is **63.19** dB(A).

INTENTIONALLY LEFT BLANK

SECTION 6 – WEIGHT AND BALANCE

INDEX

1. INTRODUCTION	3
2. WEIGHING PROCEDURES	3
2.1. Preparation	3
2.2. Levelling	3
2.3. Weighing	3
2.4. Determination of C.G. location	4
2.5. Weighing record	5
2.6. Weighing record (II)	6
3. WEIGHTS AND C.G.	7
4. BAGGAGE LOADING	9
5. EQUIPMENT LIST	10

INTENTIONALLY LEFT BLANK

1. INTRODUCTION

This section describes the procedure for establishing the basic empty weight and the moment of the aircraft. Loading procedure information is also provided.

NOTE

Aircraft must be operated in accordance with the limits concerning the maximum takeoff weight and CG excursion as reported in Flight Manual Section 2.

Pilot is responsible for checking the weight and CG excursion are compliant with the related limits. CG excursion and weight limits are reported in Section 2 – Limitations.

2. WEIGHING PROCEDURES

2.1. PREPARATION

- Carry out weighing procedure inside closed hangar
- Remove from cabin any objects unintentionally left
- Insure Flight Manual and mandatory documents are on board
- Align nose wheel
- Drain fuel via the specific drain valve
- Oil, hydraulic fluid and coolant to operating levels
- Move sliding seats to most forward position
- Raise flaps to fully retracted position (0°)
- Place control surfaces in neutral position
- Place scales under each wheel

2.2. LEVELLING

- Level the aircraft (the reference for longitudinal levelling is made putting a spirit-level on the cabin floor as shown in the Aircraft Maintenance Manual).
- If needed, adjust longitudinal attitude deflating nose tire

2.3. WEIGHING

- Record weight shown on each scale
- Repeat weighing procedure three times
- Calculate empty weight


2.4. DETERMINATION OF C.G. LOCATION

- Drop a plumb bob tangent to the wing leading edge and trace a reference mark on the floor (see Figure on Para. 2.5 or 2.6)
- Repeat the operation for other wing
- Stretch a taught line between the two marks
- Measure the distance between the reference line and both main and nose wheel axis (A and B distances respectively)
- Using recorded data it is possible to determine the aircraft C.G. location and the aircraft moment (see following table)

2.5. WEIGHING RECORD

Model **P2008 JC** S/N: 1112 Weighing no. 1 Date: 02-07-18

Datum: Propeller Flange

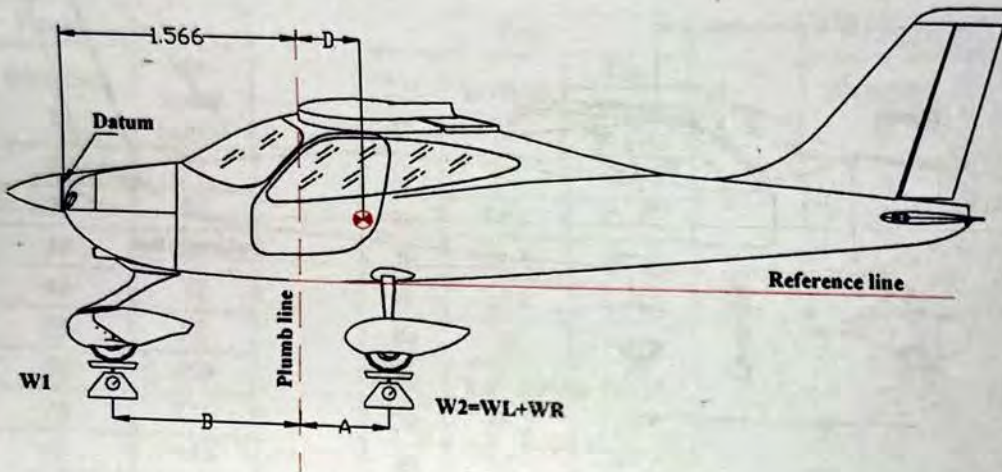


	Kg or Lbs
Nose wheel weight	$W_1 = 31,0$
LH wheel weight	$W_L = 167,0$
RH wheel weight	$W_R = 168,0$
$W_2 = W_L + W_R =$	<u>335,0</u>

	Meters or feet
Plumb bob distance LH wheel	$A_L = 0,663$
Plumb bob distance RH wheel	$A_R = 0,663$
Average distance $(A_L + A_R)/2$	$A = 0,663$
Plumb bob distance from nose wheel	$B = 1,147$

Empty weight $W_e = W_1 + W_2 = 426,0$ [kg] or [lbs]

$D = \frac{W_2 \cdot A - W_1 \cdot B}{W_e} = 0,2766$ [m] or [ft] $D\% = \frac{D}{1.373 \text{ m (or 4.5 ft)}} \cdot 100 = 20,2$


Empty weight moment: $M = [(D+1.566) \cdot W_e] = [m \cdot kg] \text{ or } [ft \cdot lbs]$ 785,3

Maximum takeoff weight	$W_T = 650 \text{ kg}$ (1433 lbs)	Signature 
Empty weight	$W_e = 426,0$ [kg] or [lbs]	
Max. useful load $W_T - W_e$	$W_u = 224,0$ [kg] or [lbs]	

2.6. WEIGHING RECORD (II)

Model **P2008 JC** S/N: _____ Weighing no. _____ Date: _____

Datum: Propeller Flange

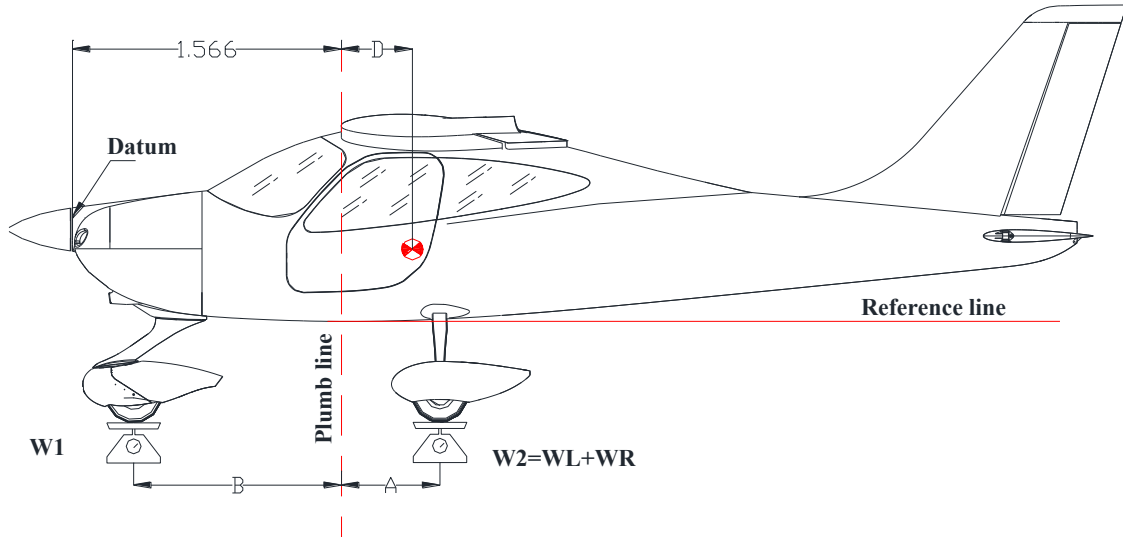

	<i>Kg or Lbs</i>		<i>Meters or feet</i>
Nose wheel weight	$W_1 =$	Plumb bob distance LH wheel	$A_L =$
LH wheel weight	$W_L =$	Plumb bob distance RH wheel	$A_R =$
RH wheel weight	$W_R =$	Average distance $(A_L + A_R)/2$	$A =$
$W_2 = W_L + W_R =$		Plumb bob distance from nose wheel	$B =$

Empty weight $W_e = W_1 + W_2 =$ [kg] or [lbs]

$D = \frac{W_2 \cdot A - W_1 \cdot B}{W_e} =$ [m] or [ft]	$D\% = \frac{D}{1.373 \text{ m (or 4.5 ft)}} \cdot 100 =$
---	---

Empty weight moment: $M = [(D + 1.566) \cdot W_e] =$ [m · kg] or [ft · lbs]

Maximum takeoff weight	$W_T = 650 \text{ kg}$ (1433 lbs)	Signature _____ _____
Empty weight	$W_e =$ [kg] or [lbs]	
Max. useful load $W_T - W_e$	$W_u =$ [kg] or [lbs]	

3. WEIGHTS AND C.G.

In order to compute the weight and balance of this aircraft, the following loading charts are provided. To compute weight and balance use the formula:

$$\text{Weight} * \text{Arm} = \text{Moment.}$$

Pilot&Passenger	
Weight(kg)	Mo-ment (kgm)
10	18
20	36
30	54
40	72
50	90
60	108
70	126
80	144
90	162
100	180
110	198
120	216
130	234
140	252
150	270
160	288
170	306
180	324
190	342
200	360
210	378
220	396
230	414

Fuel		
Li-ter	Weight (kg)	Mo-ment (kgm)
10	7.2	15.91
20	14.4	31.82
30	21.6	47.74
40	28.8	63.65
50	36	79.56
60	43.2	95.47
70	50.4	111.38
80	57.6	127.30
90	64.8	143.21
100	72	159.12
110	79.2	174.95
120	86.4	190.86
124	89.3	197.26

Baggage	
Weight(kg)	Mo-ment (kgm)
5	12.05
10	24.10
15	36.15
20	48.20

	Meter	Inches
Pilot and PAX	1.800	70.90
FUEL	2.209	86.97
BAGGAGE	2.417	95.16

To compute weight and balance:

1. Get moments from loading charts
2. Obtain the empty weight and moment from the most recent weight and balance
3. Insert the weights and the moments for fuel, occupants and baggage from the previous chart
4. Sum the weight and the moment columns
5. Divide the total moment by the total weight to get the arm
6. Check that the total weight does not exceed maximum gross weight of 630 Kg (1388 lb)
7. Check that the arm falls within the C.G. range

CoG Position Computation Chart			
	Weight (kg)	Arm (m)*	Moment (kg*m)
EmptyWeight			
Fuel		2.209	
Pilot&Passenger		1.800	
Baggage		2.417	
Total MOMENT			
Total WEIGHT			
Distance "D"= MOMENT/WEIGHT			

*ADD to the distance "D" the value 1.566m (62in)

Signature

C.G.Range	Max FWD	Max AFT
Meters	1.841	1.978

Max Weight	Pounds	Kilograms
	1433.00	650.00

Example						
	Weight		Arm		Moment	
	<i>lbs</i>	<i>kg</i>	<i>in</i>	<i>m</i>	<i>lbs in</i>	<i>kg m</i>
Empty	813.5	369.0	74.4	1.89	60533	697.4
Fuel	150.0	68.0	87.0	2.21	13052	150.4
Pax	300.0	136.1	70.9	1.80	21270	245.1
Baggage	0	0	94.9	2.41	0	0
Total	1263.5	573.1	75.1	1.91	94854	1092.8

In this example, the gross weight is under the max gross weight and the Arm or C.G. is within the C.G. range listed above.

4. BAGGAGE LOADING

The baggage loading in the dedicated compartment, behind the pilots' seats, must be carried out in accordance with C.G. excursion and weight limitations reported in Section 2.

Baggage must be uniformly distributed on compartment floor.

Pilot is provided with a red tie-down net and snap fasteners allowing for securing the loads on the compartment floor.



Loading the baggage, make sure that you correctly stretched the net which must be secured to the four vertices of the compartment.

5. EQUIPMENT LIST

The following is a comprehensive list of all TECNAM supplied equipment for the P2008 JC. The list consists of the following groups:

- A *Engine and accessories*
- B *Landing gear*
- C *Electrical system*
- D *Instruments*
- E *Avionics*

the following information describes each listing:

- Part-number to uniquely identify the item type.
- Item description
- Weight in kilograms
- Distance in meters from Datum

NOTE

Items marked with an asterisk () are part of basic installation. Equipment marked with X in the Inst. column are those actually installed on board relative to aircraft S/N.*

P2008 JC EQUIPMENT LIST		DATE: 02/07/2018			
RIF.	DESCRIPTION & P/N	INST	WEIGHT [kg]	DATUM [mm]	Q.TY [N°]
ENGINE & ACCESSORIES					
A1	GT Propellers GT-2/173/VRR-FW101 SRTC	N	6.0	-144	1
	Hoffmann Propellers - HO17GHM A 174 177C	N	6.84	-144	1
	MTV-34-1-A/170-202	X	10.0	-144	1
A2	Heat exchanger 28-10-8000-000	*	2.00	754	1
A3	Oil Reservoir (full) 956508 or 956137	*	4.00	760	1
A4	Oil radiator 886029 or 886032	*	0.50	25	1
A5	Liquid coolant radiator 995.697	*	1.50	129	1
A6	Air filter K&N 33-2544	*	0.40	315	1
A7	Electric Fuel pump 21-11-342-000 or 478360	*	1.20	764	1
A8	Thermostatic water valve 26-9-9100-000	*	0.35	316	1
A9	Thermostatic oil valve 26-9-9000-000	*	0.35	316	1
LANDING GEAR AND ACCESSORIES					
B1	Main gear wheel rims Cleveland 40-78B	N	2.05	2229	2
	Main gear wheel rims Cleveland 199-10200	*	2.05	2229	2
B2	Main gear tires Air Trac 5.00-5	*	2.58	2229	2
B3	Disk brakes Cleveland 164-17	*	0.80	2229	2
B4	Nose gear wheel rim Cleveland 0101120 or 4077C	*	1.30	418	1
B5	Nose gear tire Air Trac 5.00-5	*	1.20	418	1
B6	Nose gear fairing 28-8-1110-1 / 28-8-1112-1	*	1.50	418	1
B7	Main gear fairing 92-8-410-1/2	*	1.50	2229	2
B8	Nose gear shock 28-8-500-000	*	1.45	770	1
ELECTRICAL SYSTEM					
C1	Battery FIAMM 6H4P 12V 18Ah	N	4.70	1900	1
C2	Battery GILL-Teledyne G-25 12V 18Ah	X	9.53	1900	1
C3	Buffer Battery Sonnenschein A512/2 S	*	1.0	1900	2
C3	Battery relay 111-226-5	*	0.30	1900	1
C4	Flaps actuator control 22-5-176-1	*	2.20	2206	1
C5	Trim actuator control BRISTOL SG B6(-)	*	0.15	5818	1
C6	Overvoltage sensor Electrodelta OS75-14	N	0.30	772	1
	Overvoltage sensor LAMAR B-00289-2	X	0.30	772	1
C7	Aveo NAV/POS/Strobe AVE-WPST R/G-54G	*	0.20	2130	2
C8	Landing Led light PLEDIL	N	0.40	130	1
C9	Aveo Landing/Taxi Light AVE-H16MWSSNH-00A	X	0.40	415	1

P2008 JC EQUIPMENT LIST		DATE: 02/07/2018			
RIF.	DESCRIPTION & P/N	INST	WEIGHT [kg]	DATUM [mm]	Q.TY [N°]
INSTRUMENTS					
D1	Altimeter Mikrotechna LUN 1128.12B6 TSO C10b	Y	1.00	1084	1
D2	Airspeed ind Mikrotechna LUN 1116F2B2 TSO C2b	N	1.00	1084	1
D3	Compass - Airpath C2400 LAP - TSO C7c	*	0.29	1000	1
D4	Clock - DAVTRON mod. M 800	*	0.15	1084	1
D5	Slip Indicator SI-2Q	Y	0.56	1084	1
D6	Attitude Indicator - RC Allen Instr. RCA26EK-12	N	1.30	1084	1
D7	Trim Position Ind. UMA N0911S0U2DR0000	*	0.20	1084	1
D8	Fuel Quantity Ind. Road GmbH XID4000800	*	0.45	1090	2
D9	RPM indicator Sorlini SOR 52	X	0.30	1084	1
D10	Oil temperature indicator Sorlini SOR 54S	X	0.30	1084	1
D11	CHT temperature indicator Sorlini SOR 53	N	0.30	1084	1
D12	Voltmeter Sorlini SOR 51S	*	0.30	1084	1
D13	G3X Display (LH + RH) - P/n 28-9-5090-000	Y	1.60	1084	2
D14	G3X AHRS - P/n 28-9-5110-000	Y	1.60	1900	1
D15	G3X Magnetometer - GMU 44	Y	0.23	4697	1
D16	OAT probe - GTP 59	*	0.10	2060	1
D17	CT temperature indicator Sorlini SOR 59	X	0.30	1084	1
D18	Turn and slip coordinator MD 5550-8340N3L	Y	0.63	1084	1
D19	Primary Flight Instrument Mid Continent MD302	X	0.73	1084	1
D20	G3X Touch Display (LH + RH)	X	2.10	1084	2
AVIONICS AND OTHER					
E1	Nav/Comm Garmin SL30 Pack and connectors	N	1.50	1084	1
E2	ELT Artex ME 406	N	1.10	1900	1
E3	Transponder Garmin GTX328	N	1.00	1084	1
E4	Audio panel Garmin GMA 340	*	0.50	1084	1
E5	Transponder Antenna Garmin 010-10160-00	*	0.17	985	1
E6	GPS Antenna Garmin GA-35	X	0.27	807	1
E7	Comm Antenna Comant Industries CI-121	X	0.34	4253	1
E8	ELT Antenna Kit Model ME 406	N	0.21	1900	1
E9	First Aid Kit	*	0.30	1800	1
E10	Fire Extinguisher H3Rs Halon RTA600	N	0.60	1800	1
E11	Garmin GNC 255A COM/NAV	*	1.80	1084	1
E12	Marker beacon Antenna Comant Industries CI 102	*	0.30	2917	1
E13	Nav Antenna Comant Industries CI-158C	*	0.30	5782	1
E14	Altitude Encoder ACK technologies ACK A30	*	0.35	975	1
E15	ELT Kannad 406 AF Compact	*	1.10	1900	1
E16	ELT Antenna ANT200	*	0.21	0.11	1
E17	Transponder Garmin GTX335	X	1.30	1084	1
E18	Transponder Antenna Comant industries CI 105	X	0.12	985	1

P2008 JC EQUIPMENT LIST		DATE: 02/07/2018			
RIF.	DESCRIPTION & P/N	INST	WEIGHT [kg]	DATUM [mm]	Q.TY [N°]
E19	GPS Antenna Garmin GA-56	X	0.12	807	1
E20	COM Antenna Comant Industries CI291	X	0.34	4253	1
E21	ADC + ADAHRS Garmin GSU 25	X	0.22	2410	1
E22	EIS Garmin GEA 24	X	0.32	1070	1
E23	Magnetometer Garmin GMU 22	X	0.16	3000	1
E24	GARMIN GTR 225A COM radio	X	1.39	1084	1
E25	COM Antenna Comant Industries CI 292-2	X	0.27	4000	1
E26	Fire Extinguisher Amerex A344	*	1.50	1800	1

INTENTIONALLY LEFT BLANK

SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION

INDEX

1.	INTRODUCTION	2
2.	AIRFRAME.....	2
2.1.	Wing.....	2
2.2.	Fuselage	3
2.3.	Empennages	3
2.4.	Landing gear.....	4
3.	FLIGHT CONTROLS	5
4.	INSTRUMENT PANEL	6
4.1.	Carburettor Heat	7
4.2.	Cabin Heat.....	7
4.3.	Internal Lights System	8
5.	SEATS AND SAFETY HARNESS	9
6.	DOORS.....	9
7.	POWERPLANT	10
7.1.	ENGINE	10
7.2.	PROPELLER	10
8.	FUEL SYSTEM.....	11
9.	ELECTRICAL SYSTEM	12
9.1.	Stall Warning System	12
9.2.	Avionics	13
9.3.	External Power Supply	14
10.	PITOT-STATIC PRESSURE SYSTEMS	15
11.	BRAKES.....	16

1. INTRODUCTION

This section provides description and operation of the aircraft and its systems.

2. AIRFRAME

P2008 JC's airframe can be divided in the following main groups, as highlighted below on:

- 1) *Wings*
- 2) *Fuselage*
- 3) *Empennage*
- 4) *Landing gear*

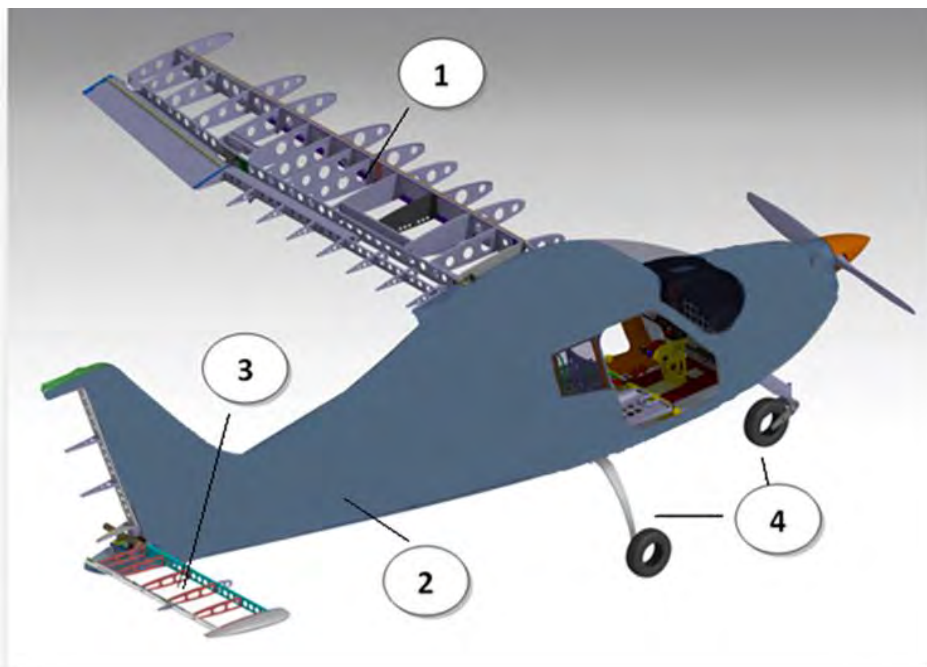


Fig. 7-1.P2008JC AIRFRAME

2.1. WING

Each wing is connected to the fuselage by means of two bolt attachments and a single strut brace per side. The wings are made up of a central light alloy torsion box; a light alloy leading edge is attached to the front spar whereas the flap (slotted) and the aileron ("frise") are attached to a rear spar through two hinges each. The torsion box consists of a front and rear spar that represent its front and rear vertical walls; a series of ribs and wrap-around panels complete the structure. Front and rear spars are integrated with wing-fuselage attachment fittings.

The ailerons and flaps are made by an aluminium spar attached to a formed sheet metal leading edge and metal ribs; an aluminium skin surrounds the aileron structure.

2.2. FUSELAGE

The P2008 JC fuselage is mainly made by carbon fibres composite materials. The fuselage is made by two main shells that are later assembled bonding the two main bodies and the floor (composite) and adding aluminium stiffeners that allow the connection of the main landing gear, seats, wing and instrument panel. In this context the fuselage and vertical fin are a unique body.

2.3. EMPENNAGES

The horizontal tail is an all-moving type; the stabilizer and elevator form a single uniform plane called stabilator that rotates to the desired pitch setting. The stabilator structure is made-up by an aluminium spar (1) and ribs (2). Aluminium skin panels are riveted to the above elements (3). A trim tab (4) provides stick force adjustment and longitudinal compensation.

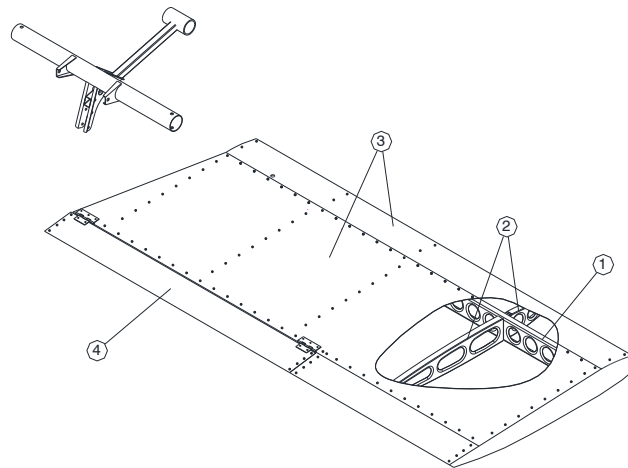


Fig. 7-2.STABILATOR STRUCTURE

The rudder structure is made-up by a single aluminium spar and ribs. Aluminium skin panels are riveted to the above elements. At the lower hinge a bellcrank is connected for the movement transmission.

2.4. LANDING GEAR

The main landing gear (see Figure 7-3) consists of two special steel leaf-springs positioned crossways to the fuselage.

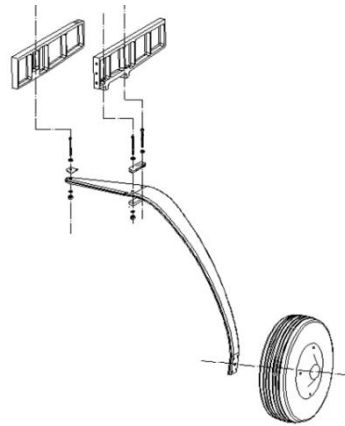


Fig. 7-3. MAIN LANDING GEAR STRUCTURE

The steel leaf-springs are attached to the fuselage structure via two couples of machined aluminium beams.

Wheels are cantilevered on gear struts and feature hydraulically actuated disc brakes controlled by toe.

A Pivoting nose gear is attached to the firewall reinforcement plate. The Hydraulic shock absorber is fitted on the upper machined component and directly on the nose landing gear structure.

In the following figure is shown:

- 1) Hydraulic shock absorber
- 2) Firewall
- 3) Nose wheel

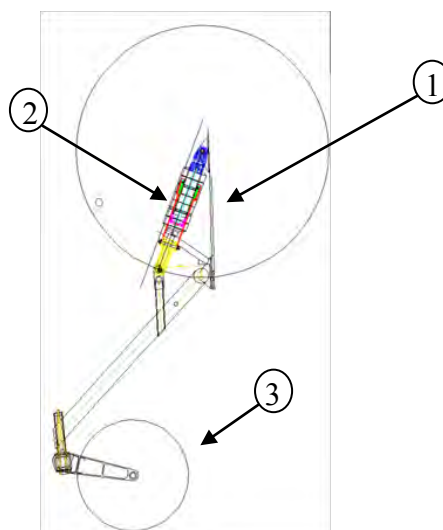


Fig. 7-4. NOSE LANDING GEAR STRUCTURE

3. FLIGHT CONTROLS

Aircraft flight controls are operated through conventional stick and rudder pedals. Longitudinal control acts through a system of push-rods and is equipped with a trim tab. a cable control circuit is confined within the cabin and it is connected to a pair of push-pull rod systems positioned in each main wing which control ailerons differentially. Aileron trimming is carried out on ground through a small tab positioned on left aileron.

Flaps are extended via an electric servo actuator controlled by a switch on the instrument panel. Flaps act in continuous mode; the indicator displays three markings related to 0°, takeoff (T/O) and landing (FULL) positions. A breaker positioned on the right side of the instrument panel protects the electric circuit.

Longitudinal trim is performed by the trim tab located on the stabilator through an electric actuator controlled by the pilot or co-pilot by a switch located on the control stick, another switch on the instrument panel, gives full authority to pilot or co-pilot control switch. An analogue trim indicator provides information about the surface position. In case of a trim control runaway a trim disconnect switch is available on the instrument panel.

4. INSTRUMENT PANEL

The instrument panel is divided in five areas.

- The main area holds
 - primary flight information instruments (MD302)
 - pilot's situational awareness instruments (G3X Touch)
 - ELT switch
 - trim LH/RH pilot's switch selector
 - pitch trim indicator
 - chronometer
 - ignition key
 - master and generator switches
 - engine instruments (Oil Temp., RPM, CT/CHT, Voltmeter)
 - breakers panel
 - two fuel indicators
- The upper area holds
 - stabilator trim cut out switch
 - day/night switch (selecting between two brightness levels for warning lights in the annunciator panel)
 - annunciator panel, with the following indications
 - ALT OUT..... (AMBER)
 - OP LOW..... (RED)
 - OP HIGH..... (RED)
 - FP LOW..... (RED)
 - FUEL PUMP ON..... (GREEN)
 - PITOT HEAT ON..... (GREEN)
 - PITOT HEAT..... (AMBER)
- The left section of the lower bezel holds
 - ignition key
 - emergency fuel pump switch
 - avionic Master switch
 - pitot heat switch
 - emergency light switch
 - carburetor heat knob
- The right section of the lower bezel holds
 - dimming devices
 - NAV, land and strobe lights switches
 - Taxi light (if installed)
- The central column holds
 - audio Panel
 - COM/NAV Panel
 - transponder
 - fuel tank selector
 - flap indicator and toggle switch
 - throttle



Fig. 7-5. INSTRUMENT PANEL

4.1. CARBURETTOR HEAT

Carburettor heat control knob is located lower-LH portion of the instrument panel; when the knob is pulled fully outward from the instrument panel, carburetors receive maximum hot air. During normal operation, the knob is set in OFF position.


4.2. CABIN HEAT

The cabin heat control knob is positioned on the lower right side of the instrument panel; when knob is pulled fully outward, cabin receives maximum hot air. If the outlets are kept closed, hot air only performs windshield defrost. Vents are located by the rudder pedals. If necessary, outside fresh air can be circulated inside cabin by opening the vents on the doors' windows.

4.3. INTERNAL LIGHTS SYSTEM

An internal lights system is provided; it's based on the following elements:

- LH light for
 - Pitch trim indicator
 - LH/RH trim switch
 - Master switch
 - Generator switch
 - Ignition
- Central light for
 - Fuel tank selector
 - ELT switch
- RH light for breaker panel
- MAP Light
- Emergency light

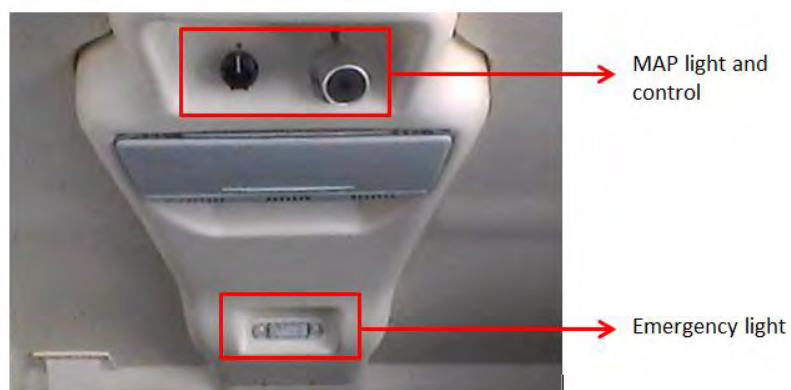

5. SEATS AND SAFETY HARNESS

Aircraft features three fitting point for safety belts equipped with waist and shoulder harnesses adjustable via sliding metal buckle.

Seats are built with light alloy tube structure and synthetic material cushioning. A lever located on the right lower side of each seat allows for seat adjustment according to pilot size.

6. DOORS

Two doors are provided for P2008 JC, on Pilot and co-pilot side. A sketch of the door is shown below (RH and LH doors are specular):

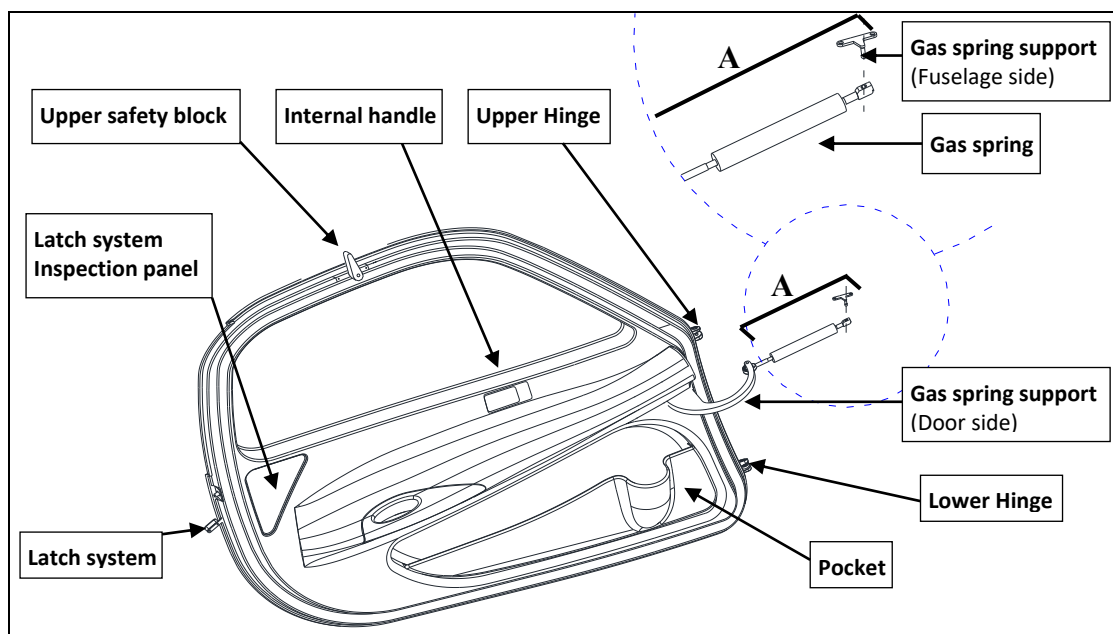


Fig. 7-6.DOOR

The door is equipped with a gas spring fixed to the fuselage that facilitates door opening.

7. POWERPLANT

7.1. ENGINE

Manufacturer:	<i>Bombardier-Rotax GmbH</i>
Model:	<i>ROTAX 912 S2</i>
Type:	<i>4 stroke, horizontally-opposed 4 cylinder, mixed air and water cooled, twin electronic ignition, forced lubrication.</i>
Maximum rating:	<i>98.6hp (73.5kW) @ 5800 rpm/min (2388 rpm/min. prop). Gear reduction ratio - 2.4286:1</i>
Max oil consumption:	<i>Max: 0.1 litres/hour</i>

7.2. PROPELLER

Manufacturer:	<i>MT Propeller</i>
Model:	<i>MTV-34-1-A/170-202</i>
N° of blades:	<i>2</i>
Diameter:	<i>1700 mm</i>
Type:	<i>fixed pitch</i>

8. FUEL SYSTEM

The fuel system is designed to supply the reciprocating engine (Bombardier-Rotax 912 S2) with the suitable flow rate and pressure according to engine limitations required by Rotax.

Following figure shows the fuel system assy of P2008JC airplane.

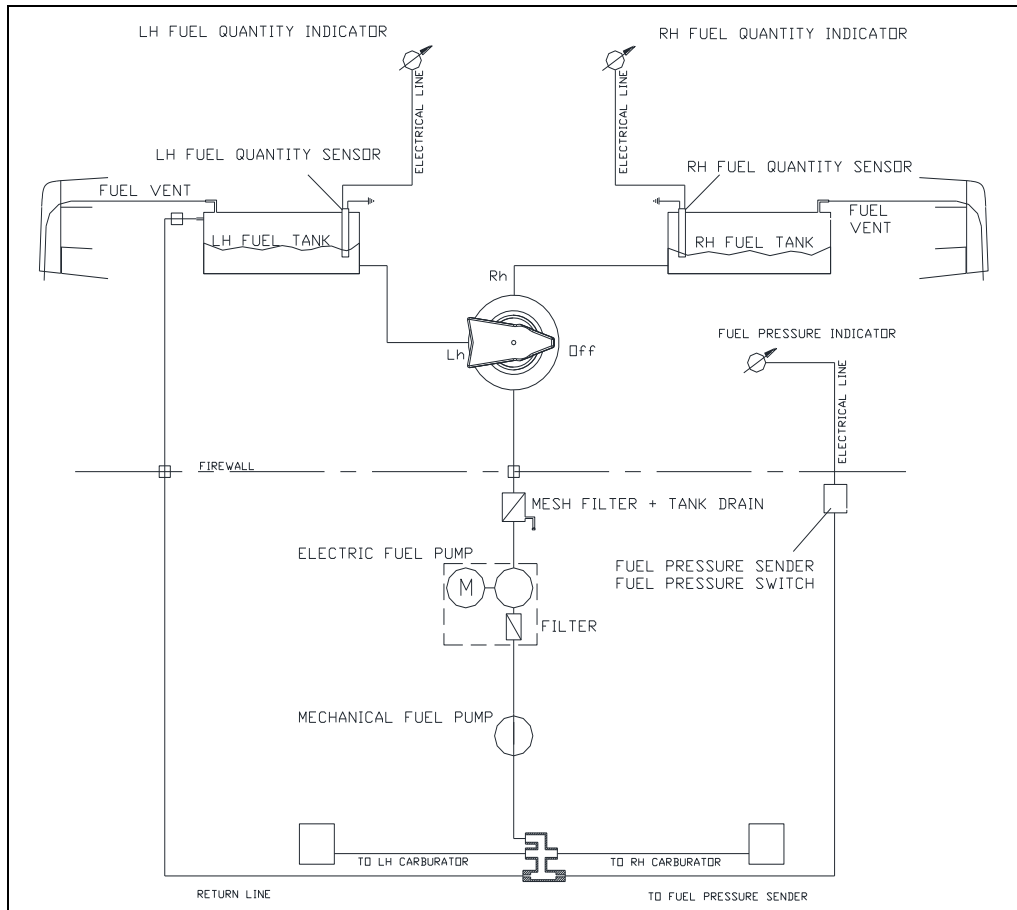


Fig.7-7. FUEL SYSTEM SCHEMATIC

Each fuel tank is integrated within the wing ribs box. The capacity of each tank is 62 liters for a total of 124 liters.

The internal side of fuel tank is accessible for inspection through two dedicated doors.

The fuel tank filler cap is located on the top of the wing, in the area outside of the tank and it is easily accessible from the leading edge of the aircraft. At the lowest point of the tank it is positioned a drain sump.

The engine is equipped with an engine gear pump, mechanical (primary). An additional auxiliary electrical fuel pump is provided (auxiliary).

The fuel selector is operated by a fuel selector control knob located in the cabin on the central panel. The fuel selector control and the fuel valve are connected via a rigid control rod.

9. ELECTRICAL SYSTEM

Primary DC power is provided by an external alternator with a 14 VDC output, rated to 40 Amps @ 5800 rpm. During normal operations, it recharges the batteries. Secondary DC power is provided by a main battery which provides the energy necessary for feeding the essential electrical loads in the event of an alternator failure.

In order to avoid the shut-down of G3X Touch during engine start-up, which is the most demanding phase in terms of current absorption, a 2 Ah valve regulated lead-acid buffer battery is installed.

This secondary battery can also provide additional electrical power in the event of an alternator failure or a total loss of electrical system. This battery is enabled by the master switch and is only connected to the G3X Touch units. It is installed beside the main battery and is housed in a dedicated box.

The switch between the energy sources (alternator and main battery) is automatic and no action is required in order to activate the alternate energy source.

For ground maintenance and/or starting, an external power socket is provided.

The alternator and battery are connected to the battery bus in order to provide energy for the electric equipment.

Each electrically fed instrument is connected to a dedicated circuit breaker which protects the cable from the battery bus to the associated electric equipment.



If the Ignition is in the position L, R, or BOTH, an accidental movement of the propeller may start the engine with possible danger for bystanders.

9.1. STALL WARNING SYSTEM

The aircraft is equipped with a stall warning system consisting of a sensor located on the right wing leading edge connected to a warning horn located near the instrument panel.

9.2. AVIONICS

The avionic system installed P2008 JC is based on MD302, which provides primary flight information. It is located in the centre of the instrument panel.

On the right side of the instrument panel, analogue indicators provide primary information of engine parameters, (RPM, oil temperature and CT/CHT).

Below engine instruments, a dedicated analogue voltmeter, which provides primary information of the electrical power supplied, and two analogue fuel quantity indicators are installed.

Garmin G3X Touch integrated avionic suite is installed. It provides flight and engine information intended for the pilot's situational awareness only.

G3X also embodies a GPS WAAS receiver whose information, intended for situational awareness only, are presented on RH display moving map.

Two dedicated indicators provide the pilot with information about the flaps and pitch trim position.

Stand-alone external COM/NAV and transponder sources (Garmin GNC 255A and GTX 335) are installed. Garmin GNC 255A navigation information is presented on the display (course and direction) along with the information related to active/standby frequency. This information is supplemented by an HSI indicator on G3X Touch LH display.

GTX 335 transponder provides SSR (Secondary Surveillance Radar) responses; this unit is capable of both mode "S" and mode "C". An external altitude encoder (ACK A-30) allows altitude reporting, this information is also presented on GTX 335 display. An automatic reversion mode is integrated within the system in order to continue providing the pilot with the flight and engine information in the event of a LH or RH display failure.

9.3. EXTERNAL POWER SUPPLY

On the right side of the tail cone, an external power is present. Using this device it is possible to feed the electric system directly on the bus bar, by an external power source. It should be used at the engine start-up in cold weather condition. For engine start below -17°C OAT it is advisable to use the external power source.

Follow this procedure to start the engine using the external power source.

1. Magnetos, Master switch, Generator switch: OFF
2. Open the receptacle door and insert the external power source's plug into the socket
3. Engine start-up procedure (see Sect. 4 in this manual)
4. Disconnect the external power source's plug and close firmly the receptacle door.

10. PITOT-STATIC PRESSURE SYSTEMS

The P2008 JC air speed/altitude indicating systems are connected with a Pitot-Static system based on a total pressure/Pitot probe (Heated Pitot tube) mounted under left wing and two static pressure ports connected in parallel and located in correspondence of engine firewall on left and right side of fuselage. Flexible plumbing connects total pressure and static ports to primary instruments. An alternate static source is located in the cabin, operated by a dedicated control.

Garmin ADAHRS (GSU25) unit, installed on the rear side of the fuselage near the battery, acts as an air data computer for Garmin G3X suite, it is connected to both static and total pressure lines providing on that suite both air speed and altitude information.

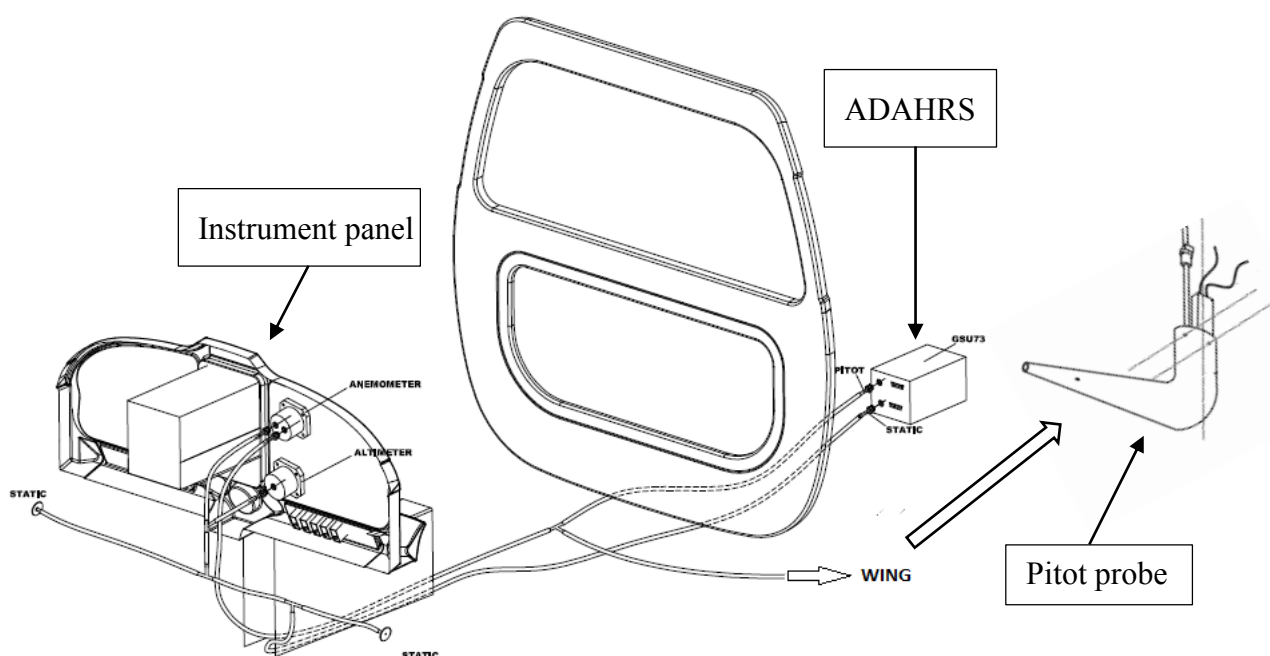


FIG.7-8. PITOT-STATIC SYSTEM

11. BRAKES

The P2008 JC is provided with an independent hydraulically actuated brake system for each main wheel. A master cylinder is attached to each pilot's rudder pedal. Hydraulic pressure, applied via the master cylinders, enters the brake via lines connected to the caliper.

A parking brake valve, mounted in correspondence of the cabin floor and operated by a knob on the cockpit central pedestal, intercepts the hydraulic lines, once pressurized by toe brakes, to hold the brake assemblies linings tightened round the main wheels brake discs. Brakes can be operated from either pilot's and co-pilot's pedals: a single vented oil reservoir feeds the pilot side master cylinders which are connected, via hoses, with the co-pilot's side ones.

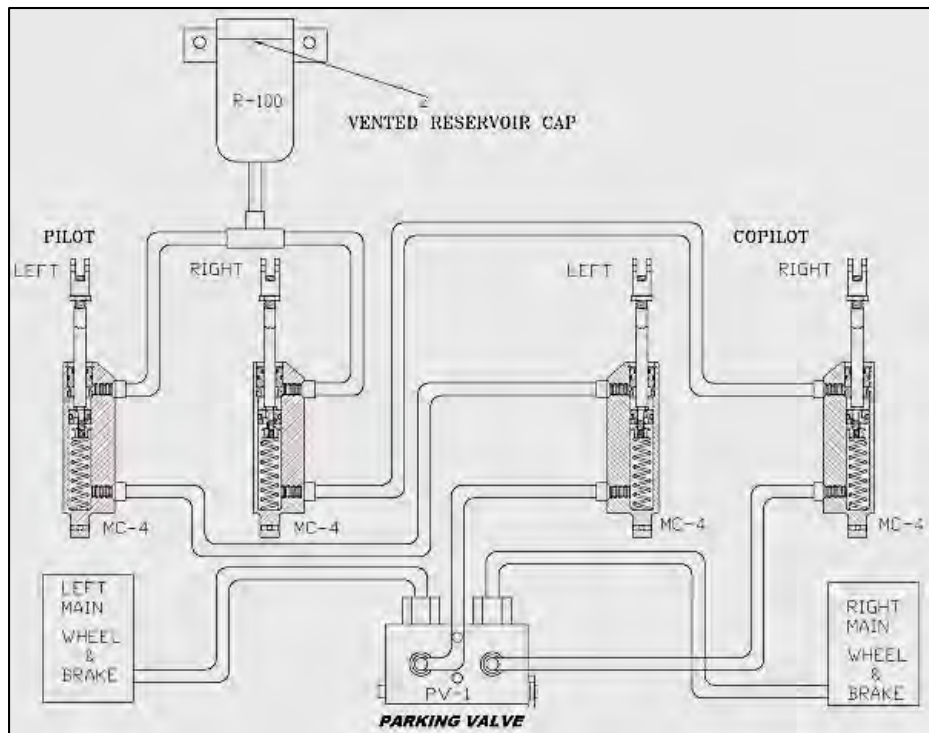


FIG. 7-9. BRAKE SYSTEM SCHEMATIC

SECTION 8 – GROUND HANDLING & SERVICE

INDEX

1.	Introduction	2
2.	Aircraft Inspection Intervals.....	3
3.	Aircraft Changes or Repairs	4
4.	Maintenance	5
4.1	Refueling.....	5
4.2	Oil level control	5
4.3	Landing gear tires pressure control	5
5.	Engine Cowling Check	6
5.1	Upper cowling.....	6
5.2	Lower Cowling	6
6.	Ground Handling.....	7
6.1	Towing	7
6.2	Parking and Tie-Down	7
6.3	Mooring	8
6.4	Jacking	8
6.5	Road Transport.....	8
7.	Cleaning And Care.....	9
7.1	Windows.....	9
7.2	External surfaces	9
7.3	Propeller.....	9
7.4	Engine	9
7.5	Internal surfaces	9
8.	Ice removal.....	10

1. INTRODUCTION

This section contains factory-recommended procedures for proper ground handling and routine care and servicing. It also identifies certain inspection and maintenance requirements.

It is recommended to follow a planned schedule of lubrication and preventive maintenance based on climatic and flying conditions encountered locally.

2. AIRCRAFT INSPECTION INTERVALS

Scheduled inspections must be performed in accordance with the instructions addressed on the Aircraft Maintenance Manual. Independently from the aircraft flight hours, an annual inspection has to be performed.

All required inspections are reported in the Aircraft Maintenance Manual.

As far as the scheduled/unscheduled engine maintenance is concerned, refer to the engine manufacturer Maintenance Manual.



Unscheduled inspections/maintenance tasks are necessary when one or more of following conditions occur:

1. *Emergency landing*
2. *Breaking / damage of propeller (or in case of simple impact)*
3. *Engine fire*
4. *Lighting damage*
5. *Any type of damage or failure*

3. AIRCRAFT CHANGES OR REPAIRS

Aircraft changes or repairs must be performed in accordance with Aircraft Maintenance Manual and Job cards provided by TECNAM.

4. MAINTENANCE

4.1 REFUELING

- *Do not perform aircraft refuelling near flames, sparks or similar.*
- *Avoid fuel contact with the skin: a skin corrosion could occur.*
- *Make sure that a fire extinguisher is available nearby during refuelling operations.*
- *Make sure that overall aircraft instrumentation is turned OFF before performing the refuelling.*
- *Do not operate switches and/or pushbuttons inside the aircraft during refuelling operation; make sure that crew left the aircraft before performing refuelling.*
- *Make sure that the aircraft is electrically connected to the ground.*



WARNING

4.2 OIL LEVEL CONTROL

1. Open the engine cowling (RH)
2. Prior to oil check, switch off ignition circuit and turn the propeller by hand in direction of engine rotation several times to pump oil from the engine into the oil tank, or let the engine idle for 1 minute. This process is finished when air is returning back to the oil tank and can be noticed by a murmur from the open oil tank.
3. Clean the dipstick and soak it in the reservoir
4. Remove dipstick and read oil level
5. If required, replenish oil: oil level should be between max. and min. Marks shown on the dipstick
6. Close the engine cowling

4.3 LANDING GEAR TIRES PRESSURE CONTROL

For each wheel proceed as follows:

1. Remove wheel fairing
2. Unscrew the tire cap
3. Connect a gauge
4. Read the pressure value
5. If required, rectify the pressure (nose tire 2.2 Bar / 32 Psi, main landing gear tires 2.8 Bar / 40 Psi)
6. Fit the tire cap
7. Install wheel fairing

5. ENGINE COWLING CHECK

5.1 UPPER COWLING

- I. Parking brake: *ON*
- II. Fuel selector valve: *OFF*
- III. Magnetos: *OFF*
- IV. Generator & Master switches: *OFF*
- V. Unlatch all four butterfly Cam-locks mounted on the cowling by rotating them 90° counter clockwise while slightly pushing inwards.
- VI. Remove engine cowling paying attention to propeller shaft passing through nose.
- VII. To assemble: rest cowling horizontal insuring proper fitting of nose base reference pins.
- VIII. Secure latches by applying light pressure, check for proper assembly and fasten Cam-locks.



Butterfly Cam-locks are locked when tabs are horizontal and open when tabs are vertical. Verify tab is below latch upon closing.

WARNING

5.2 LOWER COWLING

- I. After disassembling upper cowling, move the propeller to a horizontal position.
- II. Using a standard screwdriver, press and rotate 90° the two Cam-locks positioned on lower cowling by the firewall.
- III. Disconnect the ram-air duct from the NACA intake. Pull out the first hinge pin positioned on the side of the firewall, then, while holding cowling, pull out second hinge pin; remove cowling with downward motion.
- IV. For installation follow reverse procedure.

6. GROUND HANDLING

6.1 TOWING

The aircraft is most easily and safely maneuvered by hand by pushing on wing struts near attachments or by pulling it by its propeller near the axle. A tow bar can be fixed onto nose gear fork. Aircraft may be steered by turning rudder or, for steep turns, by pushing lightly on tail cone to lift nose wheel.

6.2 PARKING AND TIE-DOWN

General

Under normal weather conditions, the airplane may be parked and headed in a direction that will facilitate servicing without regard to prevailing winds. Ensure that it is sufficiently protected against adverse weather conditions and present no danger to other aircraft.

Procedure

1. Position airplane on levelled surface, headed into the prevailing wind, if practical.
2. Engage parking brake
3. Secure pilot control stick by wrapping the seat belt around it

NOTE:

Do not engage the parking brakes at low ambient temperature, when an accumulation of moisture may cause the brakes to freeze, or when they become hot from severe use. In this case use wheel chocks.

In case of long time parking or overnight parking, it is recommended to moor the a/c as shown on Para.6.3.



CAUTION

Mooring is strongly recommended when the wind is more than 15 knots and the a/c is completely refuelled.

6.3 MOORING

The aircraft is moored to insure its immovability, protection, and security under various weather conditions.



CAUTION

Mooring is strongly recommended when the wind is more than 15 knots and the a/c is completely refuelled.

Procedure

1. Position airplane on levelled surface and headed into the prevailing wind, if practical
2. Centre nose wheel and engage parking brake and/or use the wheel chocks

NOTE:

Do not engage the parking brakes at low ambient temperature, when an accumulation of moisture may cause the brakes to freeze, or when they become hot from severe use. In these cases use wheel chocks.

3. Secure pilot control stick by wrapping the seat belt around it
4. Assure that flaps are retracted
5. Electrically ground airplane, by connecting ground cable to the engine muffle
6. Install control locks
7. Install protective plugs
8. Close and lock cabin doors.
9. Secure tie-down cables to the nose gear leg (and to the wings (in correspondence of wing struts) and tail cone tie-down rings at approximately 45 degree with respect to the ground.

NOTE:

Additional preparation for high winds includes tie-down ropes from the main landing gear employment.

6.4 JACKING

The aircraft can be lifted up by hydraulic jacks in correspondence of the points shown by external placards.

For the correct procedure please refer to the Maintenance Manual.

6.5 ROAD TRANSPORT

It is recommended to secure tightly all aircraft components onto the cart to avoid damage during transport. Minimum cart size is 7x2.5 meters. It is suggested to place wings under the aircraft's bottom, secured by specific clamps. Secondary components like the stabilator shall be protected from accidental hits using plastic or other material. For correct rigging and de-rigging procedure, refer to the Maintenance Manual.

7. CLEANING AND CARE



Aircraft surface must be kept clean to ensure expected flight performance. Excessively dirty surfaces can affect normal flight conditions.

7.1 WINDOWS

For windows cleaning, it is allowed the use of acrylic products employed for glass and Plexiglas surfaces cleaning.

7.2 EXTERNAL SURFACES

Aircraft surface is cleaned with soapy water; they are not allowed solvents or alcohol based products. Died insects must be removed using hot water.

It is advisable to avoid outside aircraft parking for long periods; it is always convenient to keep the aircraft in the hangar.

7.3 PROPELLER

To preserve its functionality avoiding wear and corrosion, the propeller manufacturer uses, for external surface painting, an acrylic paint which is resistant to all solvents. In any case it is advisable to clean the propeller using exclusively soapy water.

7.4 ENGINE

Engine cleaning is part of the scheduled maintenance. Refer to the engine manufacturer Maintenance Manual for operating and for planning its cleaning.

7.5 INTERNAL SURFACES

Interiors must be cleaned with a rate of 3 to 6 months. Any object present in the cabin (like pens, lost property, maps etc) must be removed.

The instrumentation as a whole must be cleaned with a humid cloth; plastic surfaces can be cleaned with suitable products.

For parts not easily accessible, perform cleaning with a small brush; seats must be cleaned with a humid cloth.

8. ICE REMOVAL

Anti icing products are not allowed. To remove ice, tow the aircraft in the hangar and operate with a soft brush or a humid cloth.

SECTION 9 – AFM Supplements

INDEX

1.	Introduction.....	2
2.	Supplements list.....	3

1. INTRODUCTION

This Section concerns the supplemental manuals of additional (or optional) instrumentation equipping the **P2008JC** and/or information and limitations related to installed equipment configuration or needed to fit local national rules.

2. SUPPLEMENTS LIST

Aircraft S/N: <i>1112</i> Registration marks: <i>G-JACN</i> Date: <i>02/07/18</i>					
SUPPLEMENTS LIST FOR P2008 JC					
Sup. No.	Title	Rev. no.	Date	APPLICABLE:	
				YES	NO
S1	VFR Night equipment configuration	1		<input checked="" type="checkbox"/>	<input type="checkbox"/>
S2	AveoMaxx Hercules Landing/Taxi lights	1		<input checked="" type="checkbox"/>	<input type="checkbox"/>
S3	Hoffman propeller	1		<input type="checkbox"/>	<input checked="" type="checkbox"/>
S4	MTOW increment at 650 kg	1		<input type="checkbox"/>	<input checked="" type="checkbox"/>
S5	Argentine AFMS	0		<input type="checkbox"/>	<input checked="" type="checkbox"/>
S6	Reserved	0			
S7	MTOW increment at 650 kg for airplane equipped with Hoffmann propeller	1		<input type="checkbox"/>	<input checked="" type="checkbox"/>
S8	MD302 and G3X Touch	1		<input checked="" type="checkbox"/>	<input type="checkbox"/>
S9	MTV 34 Propeller for aircraft with MTOW Increment at 650 kg	1		<input checked="" type="checkbox"/>	<input type="checkbox"/>
S10	GARMIN GTX 335 Transponder	0		<input checked="" type="checkbox"/>	<input type="checkbox"/>
S11	KR87 ADF System	0		<input type="checkbox"/>	<input checked="" type="checkbox"/>
S12	GARMIN GTR 225A	0		<input checked="" type="checkbox"/>	<input type="checkbox"/>
S13	AFM Supplement for China	0		<input type="checkbox"/>	<input checked="" type="checkbox"/>

INTENTIONALLY LEFT BLANK

SUPPLEMENT NO.S1
VFR NIGHT EQUIPMENT CONFIGURATION

Record of Revisions

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	All	Editorial revision	A. Sabino	C. Caruso	M. Oliva	DOA Approval
1	Cover pages	Rearranged	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/103.180312)
	2N-1 thru 18, 23, 24, 27, 29, 30	Pages removed, information already contained in basic AFM				
	3N-2, 3, 4, 8, 9, 12 thru 21, 23, 24					
	7N-2, 3, 4, 5, 9, 10, 11, 12, 17, 18					
	3N-1	Index of Section 3 amended				
	3N-6, 7, 22	Content rearranged				
	4N-3, 4	Information added to normal operations speeds table; paragraph shifted from page 3 to page 4.				
4N-11 thru 18	Checklist amended					

List of Effective Pages

	Page	Revision
Cover Pages	S1-1 thru 10	<i>Rev 1</i>
Section 2	2N-19 thru 22, 25, 26, 28,	<i>Rev 0</i>
Section 3	3N-2, 5, 10, 11	<i>Rev 0</i>
	3N-1, 6, 7, 22	<i>Rev 1</i>
Section 4	4N-3	<i>Rev 1</i>
Section 7	7N-1, 6 thru 8, 13	<i>Rev 1</i>

INTRODUCTION

The information contained herein supplements or supersedes the basic Aircraft Flight Manual: detailed instructions are provided to allow the owner for replacing the basic AFM pages containing information amended as per the VFR Night Equipment Configuration in subject.

It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.

Supplement S1: pages replacement instructions

SECTION 1 –GENERAL

Refer to Basic AFM Section 1.

Supplement S1: pages replacement instructions
--

SECTION 2 – LIMITATIONS

Follow replacing instructions contained in the table below.

Supplement pages		AFM Pages
2N-19 thru 22	REPLACE	Page 2-19 thru 22 of basic AFM
2N-25 thru 26	REPLACE	Page 2-25 thru 26 of basic AFM
2N-28	REPLACES	Page 2-25 thru 28 of basic AFM

Supplement S1: pages replacement instructions**SECTION 3 – EMERGENCY PROCEDURES**

Follow replacing instructions contained in the table below.

Supplement pages		AFM Pages
3N-1	REPLACES	Page 3-1 of basic AFM
3N-5 thru 7	REPLACE	Page 3-5 thru 7 of basic AFM
3N-10	REPLACES	Page 3-10 of basic AFM
3N-11	REPLACES	Page 3-11 of basic AFM
3N-22	REPLACES	Page 3-22 of basic AFM

Supplement S1: pages replacement instructions

SECTION 4 – NORMAL PROCEDURES

Follow replacing instructions contained in the table below.

Supplement S1 pages		Basic AFM Pages
4N-3	REPLACES	4-3

Supplement S1: pages replacement instructions

SECTION 5 - PERFORMANCE

Refer to Basic AFM Section 5.

Supplement S1: pages replacement instructions

SECTION 6 – WEIGHT AND BALANCE

Refer to Basic AFM Section 6.

Supplement S1: pages replacement instructions

SECTION 7 – AIRFRAME AND SYSTEM DESCRIPTION

Follow replacing instructions contained in the table below.

Supplement S1 pages		Basic AFM Pages
7N-1	REPLACES	7-1
7N-6	REPLACES	7-6
7N-7	REPLACES	7-7
7N-8	REPLACES	7-8
7N-13	REPLACES	7-13

Supplement S1: pages replacement instructions

SECTION 8 – GROUND HANDLING & SERVICE

Refer to Basic AFM section 8.

SUPPLEMENT NO. S2
AVEOMAXX HERCULES LANDING/TAXI LIGHT INSTALLATION

Record of Revisions

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	All	Editorial revision.	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref EASA.21J.335
1	All cover pages	Amended.	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/103.180312)
	7AN-7	Paragraphs shifted.				
	Section 2 and Section 4 pages	Information integrated in basic AFM.				

List of Effective Pages

	Page	Revision
Cover Pages	S2-1 thru 4	<i>Rev 1</i>
Section 7	7AN-6	<i>Rev 0</i>
	7AN-7	<i>Rev 1</i>

INTRODUCTION

The information contained herein supplements or supersedes the basic Aircraft Flight Manual embodying Supplement S1: detailed instructions are provided to allow the owner for replacing the AFM pages, embodying Supplement S1, containing information amended as per AveoMaxx Hercules Landing/Taxi light installation in subject.

It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.

Supplement S2: pages replacement instructions

SECTION 7 – AIRFRAME AND SYSTEM DESCRIPTION

**Make sure you first applied instructions reported on Supplement S1,
Section 7 Airframe and System description**

Apply following pages replacement procedure:

Supplement S2 – Section 7 page		Supplement S1 Section 7 page
7AN-6	REPLACES	N7-6
7AN-7	REPLACES	N7-7

INTENTIONALLY LEFT BLANK

Supplement no. S8

AFMS FOR MD302 and GARMIN G3X Touch

Record of Revisions

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	All	Editorial revision	A. Sabino	C. Caruso	M. Oliva	EASA Approval Nr. 10064044
1	MW2-6, M4-15, MAN4-15, MH4-3, MH4-15, MHAN4-15, MW4-3, MW4-15, MWAN4-15, MWH4-3, MWH4-15, MWHAN4-15, MAN7-6, MAN7-7	Pages removed; information integrated in basic AFM.	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/103.180312)
	All cover pages	Updated				
	M4-3	Paragraph removed as per basic AFM change				
	M7-6, 7	Paragraphs shifted to match basic AFM arrangement.				

List of Effective Pages

	Page	Revision
Cover Pages	S8-1 thru 8	<i>Rev 1</i>
Section 2	M2-19 thru 22, M2-28, MW2-21	<i>Rev 0</i>
Section 3	M3-7	<i>Rev 0</i>
Section 4	M4-3	<i>Rev 1</i>
Section 7	M7-6 thru 8, M7-12, M7-13, M7-15	<i>Rev 0</i>

INDEX

INDEX	2
INTRODUCTION	3
Section 1 – GENERAL	4
Section 2 – LIMITATIONS	5
Section 3 – EMERGENCY PROCEDURES.....	6
Section 4 – NORMAL PROCEDURES	7
Section 7 – AIRFRAME AND SYSTEMS DESCRIPTION	8

INTRODUCTION

The information contained herein supplements or supersedes the basic Aircraft Flight Manual embodying Supplements S1.

It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.

Supplement S8: pages replacement instructions

SECTION 1 – GENERAL

**Make sure you first applied instructions reported on the basic AFM,
Section 1 General**

Refer to the basic AFM, Section 1 – General.

Supplement S8: pages replacement instructions

SECTION 2 – LIMITATIONS

**Make sure you first applied instructions reported on Supplement S1,
Section 2 – Limitations**

According A/C configuration apply following pages replacement:

Supplement S8 pages		Basic AFM pages	Supplement S1 pages	Supplement S4 pages	Supplement S7 pages
M2-19	REPLACES	2-19	2N-19	/	/
M2-20	REPLACES	2-20	2N-20	/	/
M2-21	REPLACES	2-21	2N-21	/	/
MW2-21	REPLACES	/	/	2WN-21	WHN2-21
M2-22	REPLACES	2-22	2N-22	/	/
M2-28	REPLACES	2-28	2N-28	/	/

Supplement S8: pages replacement instructions
--

SECTION 3 – EMERGENCY PROCEDURES

**Make sure you first applied instructions reported on Supplement S1
Section 3 – Emergency Procedures**

According A/C configuration apply following pages replacement:

Supplement S8 pages		Basic AFM pages	Supplement S1 pages
M3-6	REPLACES	3-6	3N-6

Supplement S8: pages replacement instructions

SECTION 4 – NORMAL PROCEDURES

**Make sure you first applied instructions reported on the basic AFM,
Section 4 – Normal Procedures**

According A/C configuration apply following pages replacement:

Supplement S8 pages		Supplement S1 page
M4-3	REPLACES	4N-3

Supplement S8: pages replacement instructions

SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION

Make sure you first applied instructions reported on the basic AFM,
Section 7 – Airframe And Systems Description

According A/C configuration apply following pages replacement:

Supplement S8 pages		Basic AFM pages	Supplement S1 pages	Supplement S2 pages
M7-6	REPLACES	7-6	7N-6	7AN-6
M7-7	REPLACES	7-7	7N-7	7AN-7
M7-8	REPLACES	7-8	7N-8	/
M7-12	REPLACES	7-12	/	/
M7-13	REPLACES	7-13	7N-13	/
M7-15	REPLACES	7-15	/	/

Supplement no. S9

MTV-34 Propeller for aircraft with MTOW Increment at 650 kg

Record of Revisions

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	-	First Issue.	A. Sabino	M. Oliva	M. Oliva	EASA Approval Nr. 10063313
1	MT4-4	Paragraph shifted from page MT4-3; information added to normal operations speeds table.	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/103.180312)
	MT5-12 thru 13	Cruise performance revised.				
	MT6-9	CG Calculation example revised.				
	MTN3-18, MTN3-23, MT4-15, MTAN4-15, MT4-16, MT6-10 thru 11	Pages removed, information included in basic AFM.				

List of Effective Pages

	Page	Revision
Cover pages	S9-1 thru 16	<i>Rev 1</i>
Section 1	MT1-6 thru 7	<i>Rev 0</i>
Section 2	MT2-5, 6, 9, 12, 16, 17, 21, MTN2-21	<i>Rev 0</i>
Section 3	MT3-9, MT3-17, , MT3-21	<i>Rev 0</i>
Section 4	MT4-4	<i>Rev 1</i>
Section 5	MT5-1 thru 11, MT5-14 thru 16	<i>Rev 0</i>
	MT5-12, 13	<i>Rev 1</i>
Section 6	MT6-5 thru 6	<i>Rev 0</i>
	MT6-9	<i>Rev 1</i>
Section 7	MT7-8, MTN7-8	<i>Rev 0</i>

INDEX

INTRODUCTION	3
Section 1 – GENERAL	5
Section 2 – LIMITATIONS	7
Section 3 – EMERGENCY PROCEDURES.....	9
Section 4 – NORMAL PROCEDURES.....	11
Section 5 – PERFORMANCE	14
Section 6 – WEIGHT AND BALANCE	17
Section 7 – AIRFRAME AND SYSTEMS DESCRIPTION	20
Section 8 – GROUND HANDLING & SERVICE	9

Section 9 Supplements*Ed. 2, Rev. 1***Supplement no. S9****MTV-34 Propeller for airplanes with MTOW Increment at 650 kg**

INTRODUCTION

This section contains supplemental information to operate the aircraft in a safe and efficient manner when equipped with MTV-34 propeller.

It is the owner's responsibility to replace the mentioned pages in accordance with the instructions herein addressed section by section.

INTENTIONALLY LEFT BLANK

Supplement S9: pages replacement instructions

SECTION 1 – GENERAL

**Make sure you first applied instructions reported on the basic AFM,
Section 1 General**

According A/C configuration apply following pages replacement:

Supplement S9 GENERAL pages		AFM Section 1 pages
MT1-6 and 7	REPLACES	1-6 and 7 of basic AFM, Section 1

INTENTIONALLY LEFT BLANK

Supplement S9: pages replacement instructions

SECTION 2 – LIMITATIONS

**Make sure you first applied instructions reported on the basic AFM,
Section 2 Limitations**

According A/C configuration apply following pages replacement:

Supplement S9 pages		Basic AFM pages	Supplement S1 pages	Supplement S8 pages
MT2-5	REPLACES	2-5	/	/
MT2-6	REPLACES	2-6	/	M2-6
MT2-9	REPLACES	2-9	/	/
MT2-12	REPLACES	2-12	/	/
MT2-16	REPLACES	2-16	/	/
MT2-17	REPLACES	2-17	/	/
MT2-21	REPLACES	2-21	/	/
MTN2-21	REPLACES	/	2N-21	M-21

INTENTIONALLY LEFT BLANK

Supplement S9: pages replacement instructions

SECTION 3 – EMERGENCY PROCEDURES

**Make sure you first applied instructions reported on the basic AFM,
Section 3 Emergency Procedures**

According A/C configuration apply following pages replacement:

Supplement S9 pages		Basic AFM pages
MT3-9	REPLACES	3-9
MT3-17	REPLACES	3-17
MT3-21	REPLACES	3-21

INTENTIONALLY LEFT BLANK

Supplement S9: pages replacement instructions

SECTION 4 – NORMAL PROCEDURES

**Make sure you first applied instructions reported on the basic AFM,
Section 4 Normal Procedures**

According A/C configuration apply following pages replacement:

Supplement S9 pages		Basic AFM pages
MT4-4	REPLACES	4-4

Supplement S9: pages replacement instructions

SECTION 5 – PERFORMANCE

**Make sure you first applied instructions reported on the basic AFM,
Section 5 Performance**

According A/C configuration apply following pages replacement:

Supplement S9 – Performance pages replace basic AFM Section 5 as a whole.

Supplement S9: pages replacement instructions

SECTION 6 – WEIGHT AND BALANCE

**Make sure you first applied instructions reported on the basic AFM,
Section 6 Weight and Balance**

According A/C configuration apply following pages replacement:

Supplement S9 pages		Basic AFM pages
MT6-5 thru 6	REPLACE	6-5 thru 6
MT6-9	REPLACES	6-9

Supplement S9: pages replacement instructions

SECTION 7 – AIRFRAME AND SYSTEMS DESCRIPTION

Make sure you first applied instructions reported on the basic AFM,
Section 7 Airframe and Systems Description

Apply following pages replacement:

Supplement S9 pages		Basic AFM pages
MT7-10	REPLACES	7-10

Supplement S9: pages replacement instructions

SECTION 8 – GROUND HANDLING & SERVICE

**Make sure you first applied instructions reported on the basic AFM,
Section 8 Ground Handling & Service**

Refer to the basic AFM, Section 8 – Ground Handling & Service.

INTENTIONALLY LEFT BLANK

**Supplement no. S10
GARMIN GTX 335****Record of Revisions**

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	-	First issue	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/103.180312)

List of Effective Pages

Page	Revision
S10-1 thru 4	<i>Rev 0</i>

INTRODUCTION

The information contained herein supplement or supersede the basic Aircraft Flight Manual. GTX 335 transponder comes optionally installed. This supplement furnishes essential information about this installation.

NOTE

For detailed operational instructions related to this equipment, see last issues of GARMIN publications.

SECTION 1 GENERAL

Refer to the basic AFM.

SECTION 2 LIMITATIONS

Refer to the basic AFM.

SECTION 3 EMERGENCY PROCEDURES

Refer to the basic AFM.

SECTION 4 NORMAL PROCEDURES

Refer to the basic AFM.

SECTION 5 PERFORMANCE

Refer to the basic AFM.

SECTION 6 WEIGHT AND BALANCE

Refer to the basic AFM.

SECTION 7 AIRFRAME AND SYSTEMS DESCRIPTION

NOTE

Make sure you first applied instructions reported on the basic AFM, Section 7 Airframe and Systems Description.

AVIONICS

GTX 335 is installed in the center of the cockpit under the GNC 255A.

The unit is shown in Fig.1. The transponder is associated with an antenna, placed under the a/c, and with a GPS antenna installed in order to have a source for the ADS-B OUT.



Fig. 1. GARMIN GTX 335

SECTION 8 GROUND HANDLING & SERVICE

Refer to the basic AFM.

**Supplement no. S12
GARMIN GTR 225A****Record of Revisions**

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	-	First issue	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2008/103.180312)

List of Effective Pages

Page	Revision
S12-1 thru 4	<i>Rev 0</i>

INTRODUCTION

The information contained herein supplement or supersede the basic Aircraft Flight Manual embodying the design changes:

- *MOD2008/037 Alternative avionic package based on MD302 and G3X touch (VFR/N);*
- *MOD2008/098 Additional GTR 225A for G3X Touch equipped aeroplanes.*

GTR 225A comes optionally installed as a second COM Radio. This supplement furnishes essential information about this installation.

NOTE

For detailed operational instructions related to this equipment, see GARMIN GTR 225/225A/225B Pilot's Guide, P/N 190-01182-00, last issue.

SECTION 1 GENERAL

Refer to the basic AFM.

SECTION 2 LIMITATIONS

Refer to the basic AFM.

SECTION 3 EMERGENCY PROCEDURES

Refer to the basic AFM.

SECTION 4 NORMAL PROCEDURES

Refer to the basic AFM.

SECTION 5 PERFORMANCE

Refer to the basic AFM.

SECTION 6 WEIGHT AND BALANCE

Refer to the basic AFM.

SECTION 7 AIRFRAME AND SYSTEMS DESCRIPTION

NOTE

Make sure you first applied instructions reported on the basic AFM, Section 7 Airframe and Systems Description.

INSTRUMENT PANEL

GTR 225A is installed in the center of the cockpit under the GNC 255A, in place of the transponder GTX 335 that has been placed below the GDU 460 LH display as shown in Fig.1.



Fig. 7-1. INSTRUMENT PANEL

ELECTRICAL SYSTEM

GTR 225A is connected to the audio panel GMA 340 and to the COM 2 antenna. It is powered from the avionic bus through a 10 A circuit breaker labelled *COM 2*, as shown in Fig.1.

SECTION 8 GROUND HANDLING & SERVICE

Refer to the basic AFM.